

## TMP6402 Quick Installation Guide, 9010-00181-1A, Issue 3.1

1

Items not included in this box that you will need:

- One or two AC or DC power cords
- 19" equipment rack
- PSTN cables (RJ 48/coax/fiber)


2

In the box, you will find:

- One TMP6402
- One set of mounting brackets with screws
- One DB-9 to RJ-45 adapter
- SCSI Cables and Patch Panels, if applicable
- Three CAT5 Ethernet Cables (male-male)
- One warranty sheet
- One packing slip
- One TMP6402 Quick Installation Guide

3

Install rack-mounting hardware on TMP6402 and install on equipment rack

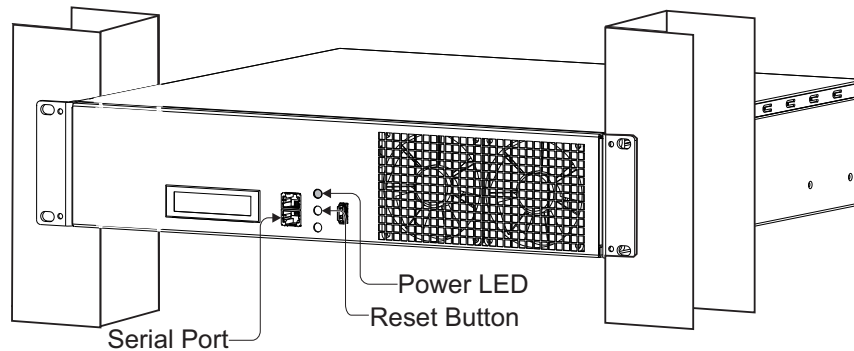


4

A) Connect to Tmedia Control Network (ports labelled ETH-1&2).

B) Connect to VoIP network (ports labelled VoIP-1&2).

C) Connect TMS ports to TMS1600, if applicable (ports labelled TMS-1&2).

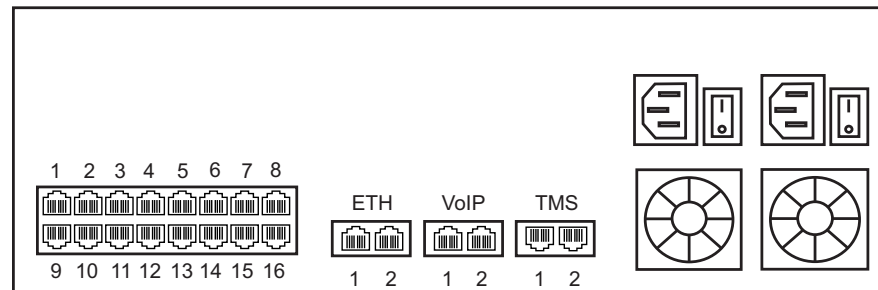


5


Connect to PSTN Network, using one of the following options:

- RJ-48 Interface (T1/E1/J1)
- SCSI Interface (T1/E1/J1)
- Dual BNC (DS3)
- Optical Interface (OC3/STM-1)


RJ-48

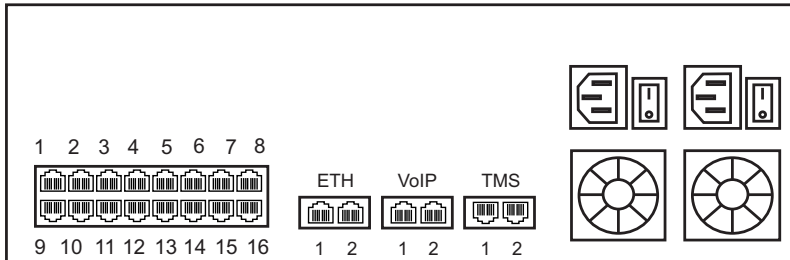


DS3

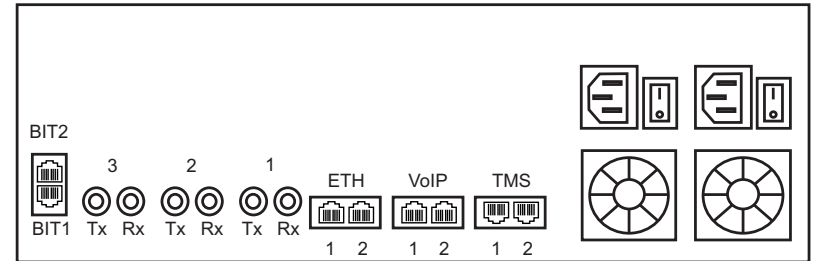

SCSI

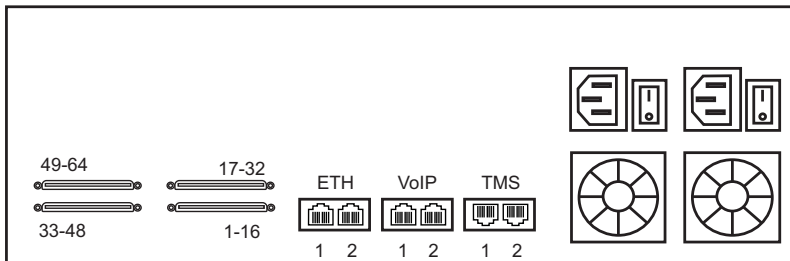


STM 1

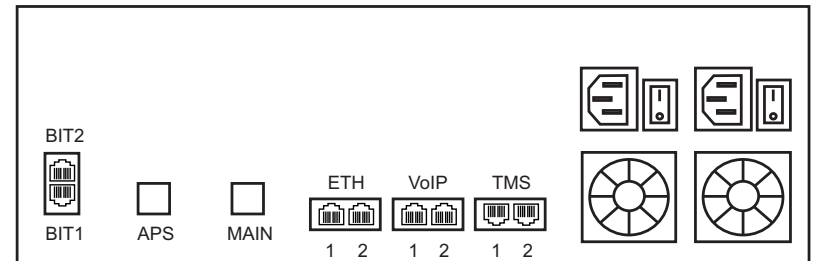

6

- A) Connect to two independent power sources (if only one power source is used, press the green button at the rear of the unit to disable the audible alarm).
- B) Turn on power by pressing the Reset Button on the front panel of the unit
- C) Verify Power LED = Solid Green (Refer to Panel 3)

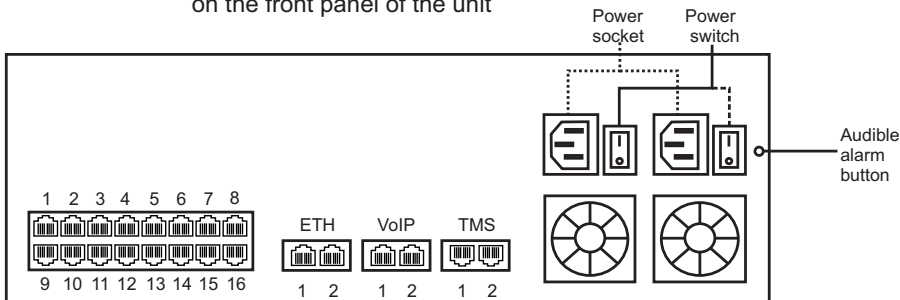

7

Connect the TMP6402 serial port to your PC. (Refer to panel 3)  
(If required, use the DB9 to RJ-45 Adapter.)

8

Using a serial terminal, configure the IP address and gateway.  
Enter the following command:

- Type `set_boot`

9

Next Steps?

Refer to the TMP6400 documentation set for information on configuring and administering your TMP6402.