

TMP6400 Development Platform System Installation Guide

Issue 3.0f

The information in this document as well as product specifications referred to throughout, are subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of TelcoBridges. TelcoBridges may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. The furnishing of this document does not give you license to these patents, trademarks, copyrights, or other intellectual property except as expressly provided in any written license agreement from TelcoBridges Inc.

The information provided in this document is intended as a guide only. For the latest detailed engineering specifications, please contact TelcoBridges TB Support or visit the TBWiki: <http://docs.telcobridges.com>. TelcoBridges is committed to continually improving product designs; as a result, product specifications may be subject to change without notification.
© 2003-2013 TelcoBridges. All rights reserved.

TelcoBridges, Tmedia, TMG800, TMG3200-RJ, TMG3200-TE, TMG3200-DS3, TMG3200-STM1, TMG7800-TE, TMG7800-DS3, TMG7800-STM1, TMG7800-CTRL, TMG-CONTROL, TMG7800-TMS, Tmedia 1+1, TMG800+1, TMG3200-RJ+1, TMG3200-TE+1, TMG3200-DS3+1, TMG3200-STM1+1, TMG7800-TE+1, TMG7800-DS3+1, TMG7800-STM1+1, Tdev, TMP800, TMP6400, TMP6400-CTRL, TMP6400-TMS, Tmonitor, TM1000, Toopack, Toolpack API, TB640, TB-8, TB-16, and TB-Video, are trademarks of TelcoBridges Inc. All other trademarks are the property of their owners. This information is subject to change without notice.

HEAD OFFICE

TelcoBridges Inc.
91 rue de la Barre, Suite 01
Boucherville, QC, J4B 2X6
CANADA
www.telcobridges.com

T +1 450 655 8993
F +1 450 655 9511
info@telcobridges.com

TB Support -Technical Support

Tel: +1 438 338 2100
support@telcobridges.com
www.telcobridges.com/en/tbsupport.aspx

Preface

About this Guide

This guide provides installation, and setup procedures for the Tdev TMP6400 Development Platform.

Conventions

| Terminology | Description |
|-----------------------------------|---|
| Tdev TMP6400 Development Platform | This term is used when a description applies to the Tmedia system comprised of the TMP6400-CTRL, TMP6400 Telecom Unit, and TMP6400-TMS. |
| TMP6400-CTRL | This term is used when a description applies specifically to the TMP6400-CTRL application server. |
| TMP6400 Telecom Unit | This term is used when a description applies to all variations of the TMP6400 Telecom Units (TE, DS3, STM1). |
| TMP6400-TMS | This term is used when a description applies specifically to the TMP6400-TMS media switch. |

Contact Us

If you have comments about this guide or any other TelcoBridges technical documentation, please send an email to marketing@telcobridges.com.

Table of Contents

| | | |
|-----------|--|----|
| Chapter 1 | Introduction..... | 1 |
| 1.1 | Identifying the Tdev TMP6400 Development Platform Equipment..... | 2 |
| 1.2 | Installation Prerequisites | 4 |
| 1.2.1 | TMP6400-CTRL | 4 |
| 1.2.2 | TMP6400 Telecom Units..... | 5 |
| 1.2.3 | TMP6400-TMS | 5 |
| 1.3 | Preventing Electrostatic Discharge Damage..... | 5 |
| 1.4 | Recommended Reading..... | 6 |
| Chapter 2 | Installing the Equipment | 7 |
| 2.1 | Package Contents | 8 |
| 2.1.1 | TMP6400-CTRL Application Servers | 8 |
| 2.1.2 | TMP6400 Telecom Unit..... | 9 |
| 2.1.3 | TMP6400-TMS Media Switch..... | 10 |
| 2.2 | Rack Mounting the Tdev TMP6400 Development Platform Equipment | 11 |
| 2.2.1 | Prerequisites | 11 |
| 2.2.2 | Vertical Placement of Tdev TMP6400 Development Platform Equipment | 11 |
| 2.2.3 | Installing the Tdev TMP6400 Development Platform on an Equipment Rack..... | 12 |
| 2.2.3.1 | TMP6400-CTRL | 12 |
| 2.2.3.2 | TMP6400 Telecom Units..... | 22 |
| 2.2.3.3 | TMP6400-TMS | 22 |
| 2.3 | TMP6400-CTRL | 23 |
| 2.3.1 | Connecting to the System Management Interface | 24 |
| 2.3.2 | Connecting to the Tmedia Control Network | 25 |
| 2.3.3 | Powering Up..... | 26 |
| 2.3.3.1 | Connecting to AC Power | 26 |
| 2.3.3.2 | Connecting to DC Power..... | 27 |
| 2.4 | TMP6400 Telecom Unit..... | 28 |
| 2.4.1 | Connecting to the Tmedia Control Network | 29 |
| 2.4.2 | Connecting to the VoIP Network(s)..... | 30 |
| 2.4.3 | Connecting to the PSTN..... | 31 |
| 2.4.3.1 | SCSI Interface (T1/E1) for the TMP6400-TE | 32 |
| 2.4.3.2 | Dual BNC Interface (DS3) for the TMP6400-DS3 | 34 |
| 2.4.3.3 | Optical Interface (OC3/STM-1) for the TMP6400-STM1 | 35 |
| 2.4.4 | Connecting to the TMS Network | 36 |
| 2.4.4.1 | Connecting to the TMP6400 Telecom Units..... | 36 |
| 2.4.4.2 | Interconnecting Two TMP6400 Telecom Units | 38 |
| 2.4.5 | Powering Up..... | 39 |
| 2.4.5.1 | Connecting to AC Power | 39 |
| 2.4.5.2 | Connecting to DC Power..... | 40 |
| 2.5 | TMP6400-TMS | 41 |
| 2.5.1 | Connecting to the Tmedia Control Network | 41 |
| 2.5.2 | Powering Up..... | 42 |
| 2.5.2.1 | Connecting to AC Power | 42 |
| 2.5.2.2 | Connecting to DC Power..... | 43 |

| | | |
|-------------------|---|-----------|
| 2.5.3 | TDM System Clock..... | 43 |
| 2.6 | Start Up | 44 |
| 2.6.1 | Primary | 44 |
| 2.6.2 | Secondary | 46 |
| 2.7 | Verifying the LED Status Indications | 48 |
| 2.7.1 | TMP6400-CTRL | 48 |
| 2.7.2 | TMP6400 Telecom Unit..... | 48 |
| 2.7.3 | TMP6400-TMS | 50 |
| 2.8 | Powering Down | 51 |
| 2.8.1 | TMP6400-CTRL | 51 |
| 2.8.2 | TMP6400 Telecom Unit..... | 51 |
| 2.8.3 | TMP6400-TMS | 51 |
| Chapter 3 | Initial System Configuration..... | 53 |
| 3.1 | Connecting to the Server..... | 53 |
| 3.1.1 | Configuring the Terminal Emulator Application | 55 |
| 3.1.2 | Connecting to the Tdev Development Platform..... | 55 |
| 3.1.3 | Retrieving Tdev Development Platform Information..... | 56 |
| 3.1.4 | Changing the Tdev Development Platform Management Port IP Address | 56 |
| 3.1.5 | Changing Tdev Development Platform Management Port Passwords | 56 |
| 3.1.6 | Setting the Time Zone | 56 |
| 3.2 | Connecting to the Telecom Unit | 57 |
| 3.2.1 | Configuring the Terminal Emulator Application | 57 |
| 3.2.2 | Using the set_boot and print_boot Commands | 58 |
| 3.2.3 | Creating a Shell Password | 61 |
| 3.2.4 | Applying Changes | 61 |
| Chapter 4 | System Backups..... | 63 |
| 4.1 | Creating a Database Backup | 64 |
| 4.2 | Downloading a Database Backup | 64 |
| 4.3 | Uploading a Database Backup..... | 64 |
| 4.4 | Restoring a Database Backup..... | 64 |
| Appendix A | Wiring Diagrams..... | 65 |
| A.1 | RJ48C Wiring Diagram: Crossover and Straight Cables..... | 66 |
| A.2 | RJ48 Console Wiring Diagram | 67 |

Chapter 1 Introduction

This chapter provides an introduction to the installation and setup of a Tdev TMP6400 Development Platform:

The following topics are covered:

- Section 1.1 “Identifying the Tdev TMP6400 Development Platform Equipment”
- Section 1.2 “Installation Prerequisites”
- Section 1.3 “Preventing Electrostatic Discharge Damage”
- Section 1.4 “Recommended Reading”

1.1 Identifying the Tdev TMP6400 Development Platform Equipment

The Tdev TMP6400 Development Platform is comprised of the following equipment:

- One (1) or two (2) TMP6400-CTRL application server(s). See figure 1.1 on page 2.
- One (1) to 16 TMP6400 Telecom Unit(s). See figure 1.2 on page 3.
- Based upon the configuration of your Tdev TMP6400 Development Platform, the number of TMP6400-TMS media switch(es) may range from zero (0) to two (2). See figure 1.3 on page 3.

TMP6400-CTRL (outer view)



TMP6400-CTRL (inner view)

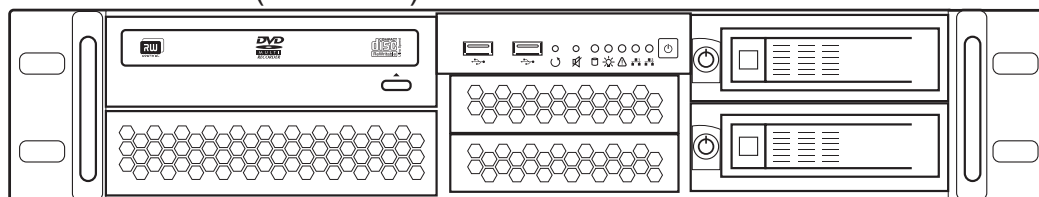


Figure 1.1 TMP6400-CTRL Front Views

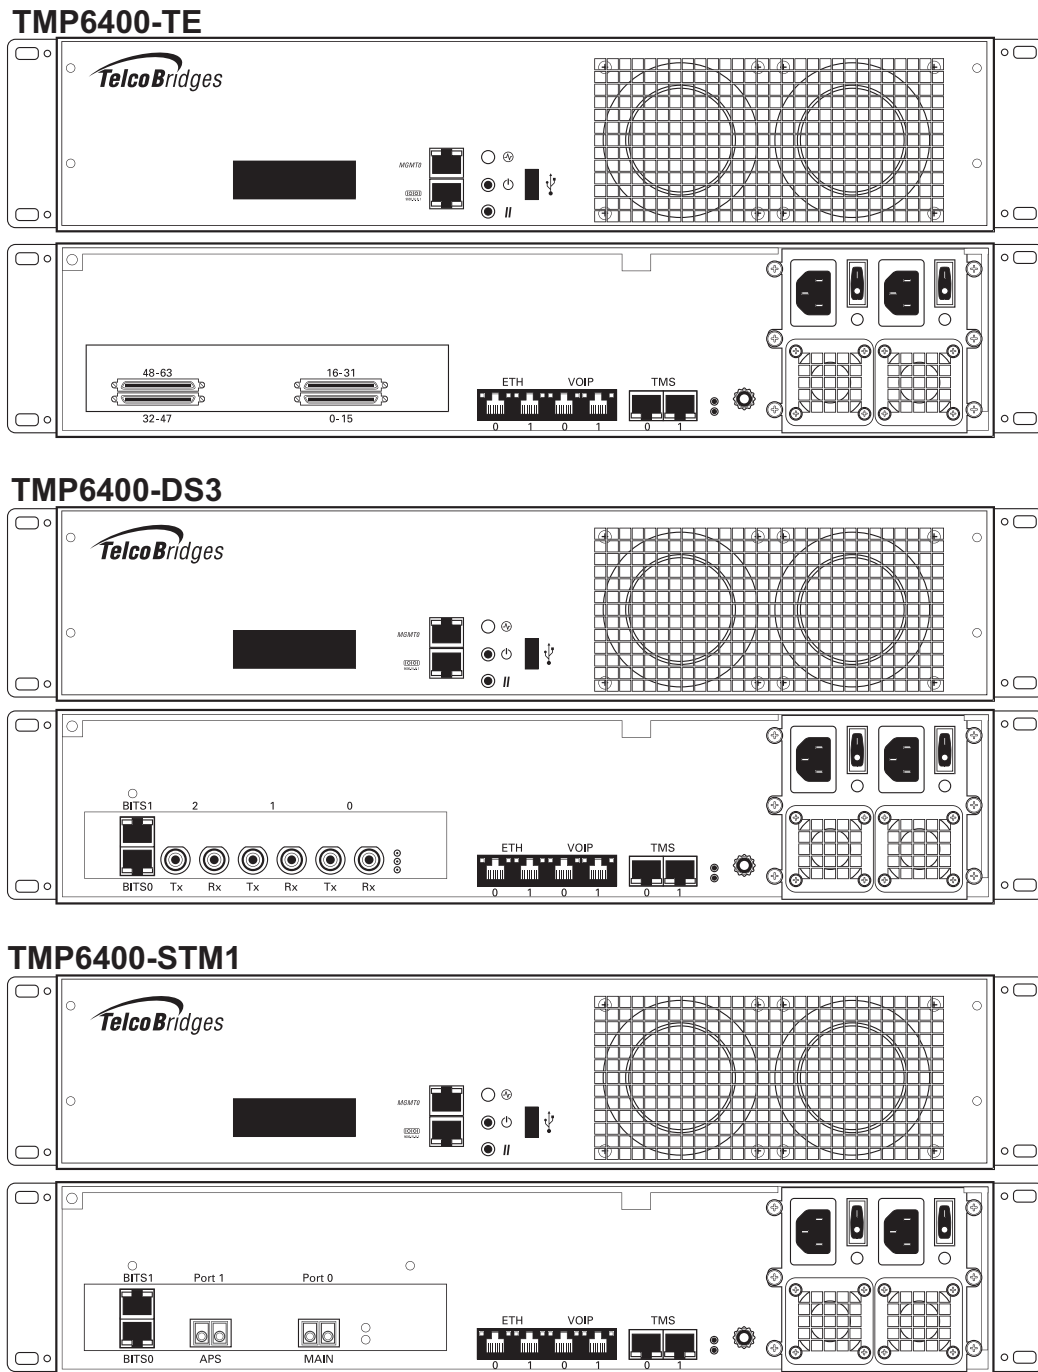


Figure 1.2 TMP6400 Telecom Units Front and Rear Views

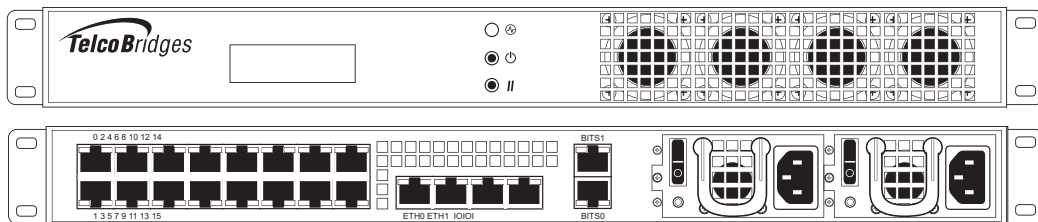


Figure 1.3 TMP6400-TMS Front and Rear Views

1.2 Installation Prerequisites

For the installation to proceed without interruption, it is important that you verify that you have all necessary materials on hand.

1.2.1 TMP6400-CTRL


Adequate space for the installation of the TMP6400-CTRL

You will need to mount the TMP6400-CTRL on a 19" equipment rack (customer provided). Your TMP6400-CTRL is a 2U unit. Plan for an additional 2U space on the equipment rack for a redundant TMP6400-CTRL.

Note The depth of the TMP6400-CTRL is 26" (660mm) instead of 16" (406mm) depth of the TMP6400 Telecom Units. It is important to plan for an equipment rack of an adequate size.

The dimension of the TMP6400-CTRL are as follows:

- Depth x Width x Height (mm) 660 x 430 x 88
 - Depth x Width x Height (inch) 26" x 16.9" x 3.5"
-

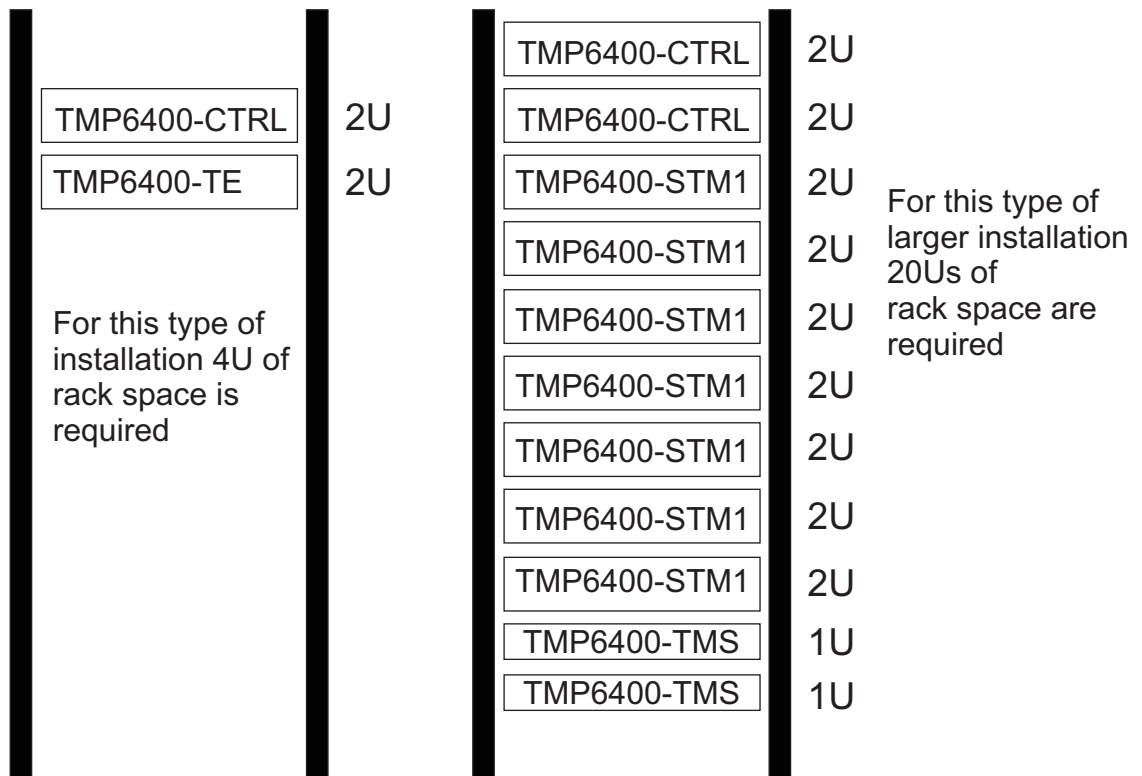

Adequate power supply and power connections

Each TMP6400-CTRL requires two power connections to provide for its redundant power supply. To guarantee an uninterrupted supply of electricity, each power connection must be fed by a dedicated power source.

An IP address for the management port

Each TMP6400-CTRL requires a IP address for the management port. To avoid delays, you should have the IP address, netmask and gateway addresses on hand. Take note that the management port supports DHCP, see Section 2.3.1 “Connecting to the System Management Interface” on page 24 for further information.

Cabling

Three (3) customer supplied ethernet cables are required for each TMP6400-CTRL to connect the TMP6400-CTRL to the switches.

1.2.2 TMP6400 Telecom Units

Adequate space for the installation of each TMP6400 Telecom Unit

You will need to mount each TMP6400 Telecom Unit (1-16 units) on a 19" equipment rack (customer provided). Each TMP6400 Telecom Unit is housed in a 2U chassis.

Adequate power supply and power connections

Each TMP6400 Telecom Unit requires two power connections to provide for its redundant power supply.

To guarantee an uninterrupted supply of electricity, each power connection must be fed by a dedicated power source.

1.2.3 TMP6400-TMS

Adequate space for the installation of the TMP6400-TMS

You will need to mount the TMP6400-TMS on a 19" equipment rack (customer provided). Your TMP6400-TMS is a 1U unit. Plan for an additional 1U space on the equipment rack for a redundant TMP6400-TMS.

Adequate power supply and power connections

Each TMP6400-TMS requires two power connections to provide for its redundant power supply. To guarantee an uninterrupted supply of electricity, each power connection must be fed by a dedicated power source.

1.3 Preventing Electrostatic Discharge Damage

Electrostatic discharge (ESD) can damage equipment and impair electrical circuitry. It may occur if electronic printed circuit cards are improperly handled and may cause complete or intermittent failure.



Warning

Always follow ESD prevention procedures when removing and replacing modules:

- Ensure that the Tdev Development Platforms are grounded.
 - Wear an ESD-preventive wrist strap and ensure that it makes good contact with your skin. Connect the wrist strap clip to an unpainted surface of the Tdev Development Platform or the grounded equipment rack in order to channel away all ESD voltage safely to ground. To guard against ESD damage and shocks, the wrist strap and cord must be in proper working condition.
 - If no wrist strap is available, and you must work with Tdev Development Platforms, ground yourself by touching a metal part of the chassis.
-

1.4 Recommended Reading

This document assumes that you have a clear understanding of the installation of the TelcoBridges Tdev Development Platforms and have been trained to work with the equipment. If you have any technical questions, TelcoBridges TB Support (technical support team) can be reached via telephone (+1 866 438 4703) or email: support@telcobridges.com.

Documents exploring various aspects of the Tmedia system are available on the TB Wiki: <http://docs.telcobridges.com>

Chapter 2 Installing the Equipment

This chapter provides information about the following topics:

- Section 2.1 “Package Contents”
- Section 2.2 “Rack Mounting the Tdev TMP6400 Development Platform Equipment”
- Section 2.3 “TMP6400-CTRL”
- Section 2.4 “TMP6400 Telecom Unit”
- Section 2.5 “TMP6400-TMS”
- Section 2.7 “Verifying the LED Status Indications”
- Section 2.8 “Powering Down”

2.1 Package Contents

Depending on your system requirements, you may receive one or more of the following items:

- Section 2.1.1 “TMP6400-CTRL Application Servers” on page 8.
- Section 2.1.2 “TMP6400 Telecom Unit” on page 9.
- Section 2.1.3 “TMP6400-TMS Media Switch” on page 10.

The contents of these devices are described in the following sections.

2.1.1 TMP6400-CTRL Application Servers

In the TMP6400-CTRL box, you will find the following items:

- One (1) TMP6400-CTRL. See figure 1.1 on page 2.
- Four (4) keys.
- One (1) front bezel.
- Two (2) hard drives.
- Two (2) power cords.
- One Product Warranty.
- One Important Notice (two-sided document containing pertinent product serial numbers and other important information).
- One (1) packing slip.
- One (1) set of sliding rails and associated screws.
- One (1) set of brackets and associated screws.

Not included

- Ethernet cables.

2.1.2 TMP6400 Telecom Unit

In the TMP6400 Telecom Unit box, you will find the following items:

- One (1) TMP6400 unit (TMP6400-TE, TMP6400-DS3, or TMP6400-STM1). See figure 1.2 on page 3.
- One (1) set of mounting brackets and screws, used to mount the TMP6400 to a 19" rack.
- One (1) DB-9 to RJ-45 adapter to interface the serial port of your computer with the RJ-45 port of the TMP6400.
- Three (3) CAT5 Ethernet (blue) straight cables (male-male), 3 meters in length.
- One (1) Important Notice (two-sided document containing pertinent product serial numbers, and other important information).
- One (1) Product Warranty.
- One (1) packing slip.
- One (1) Quick Installation Guide (two-sided document that provides a pictorial view of the equipment setup).
- Two (2) AC or DC power cables

Specifically with the TMP6400-TE, you will also have:

- One (1) or two (2) patch panel(s)
- Two (2) SCSI cables per patch panel.

Not included

- A 19" equipment rack. The Tdev TMP6400 Development Platform must be installed on a 19" wide equipment rack.

2.1.3 TMP6400-TMS Media Switch

In the TMP6400-TMS media switch box, you will find the following items:

- One (1) TMP6400-TMS unit. See figure 1.3 on page 3.
- Three (3) CAT5 Ethernet (blue) straight cables (male-male), 3 meters in length.
- One (1) DB-9 to RJ-45 adapter to interface the serial port of your computer with the RJ-45 port of the TMP6400-TMS.
- One (1) set of mounting brackets and screws, used to mount the TMP6400-TMS to a 19" rack.
- One (1) Important Notice (two-sided document containing pertinent product serial numbers, and other important information).
- One (1) Product Warranty.
- One (1) packing slip.
- One (1) Quick Installation Guide (two-sided document that provides a pictorial view of the equipment setup).
- Two (2) AC or DC power cables

Not included

- A 19" equipment rack. The TMP6400-TMS must be installed on a 19" wide equipment rack.

2.2 Rack Mounting the Tdev TMP6400 Development Platform Equipment

The Tdev TMP6400 Development Platform equipment is mounted on a customer provided equipment rack using the mounting hardware packaged in each box.

2.2.1 Prerequisites

To rack mount the equipment, you will need:

- One customer-provided equipment rack, measuring 19" in width and 31.5" in depth. The rack must be solidly anchored to the floor with appropriate support at the top of the racks.
- Climate controlled room: 0 to +50 Celsius, 0 to 95% non-condensing humidity.

2.2.2 Vertical Placement of Tdev TMP6400 Development Platform Equipment

The TMP6400-CTRL and TMP6400 Telecom Units are each housed in a 2U chassis, while the TMP6400-TMS is housed in a 1U chassis, as tabulated in table 2.1 on page 11. It is important that you provide for enough room on the equipment rack to allow for the installation of the equipment.

Consider the available space on your equipment rack and the height of one (1) or two (2) TMP6400-CTRL unit(s), one (1) to sixteen (16) TMP6400 Telecom Unit(s), and from zero (0) to two (2) TMP6400-TMS units. Due to the rear-exhaust heat vents and the efficient heat dissipation design, there is no need to leave any physical vertical space above or below the TMP6400-CTRL unit(s), TMP6400 Telecom Unit(s), and the TMP6400-TMS unit(s) on the equipment rack.

Table 2.1 Tdev Development Platform Physical Height

| Tmedia Model Number | Vertical Height |
|----------------------|------------------------------|
| TMP6400-CTRL | 2U (3.5 inches or 89.10 mm) |
| TMP6400 Telecom Unit | 2U (3.5 inches or 89.10 mm) |
| TMP6400-TMS | 1U (1.75 inches or 44.45 mm) |
| Patch Panels | 1U (1.75 inches or 44.45 mm) |

2.2.3 Installing the Tdev TMP6400 Development Platform on an Equipment Rack

The TMP6400-CTRL, TMP6400 Telecom Unit, and TMP6400-TMS are mounted on a 19" equipment rack using the angle brackets and screws provided in the box.

2.2.3.1 TMP6400-CTRL

Mounting the TMP6400-CTRL Unit(s):

The TMP6400-CTRL is installed in a 19" equipment rack using one of the following two methods:

Method One: Slider Rails

1. Install the left sliding rail on the left-hand side of the equipment rack.
 - 1a. Attach the front end of the slider rail to the front edge of the equipment rack. See figure 2.1 on page 13.
 - 1b. Attach the rear end of the slider rail to the rear edge of the equipment rack. See figure 2.2 on page 13 and figure 2.3 on page 14.
2. Repeat Step 1 to install the right sliding rail on the right-hand side of the equipment rack.
3. Extend both sliding rails. See figure 2.4 on page 14.
4. Attach the TMP6400-CTRL to the rails. See figure 2.5 on page 15 and figure 2.6 on page 15.
5. Push the TMP6400-CTRL back into the equipment rack until it locks into place.

Note To unlock the rails and slide the TMP6400-CTRL outwards from the equipment rack, depress the purple colored buttons on each side of the sliding rails.

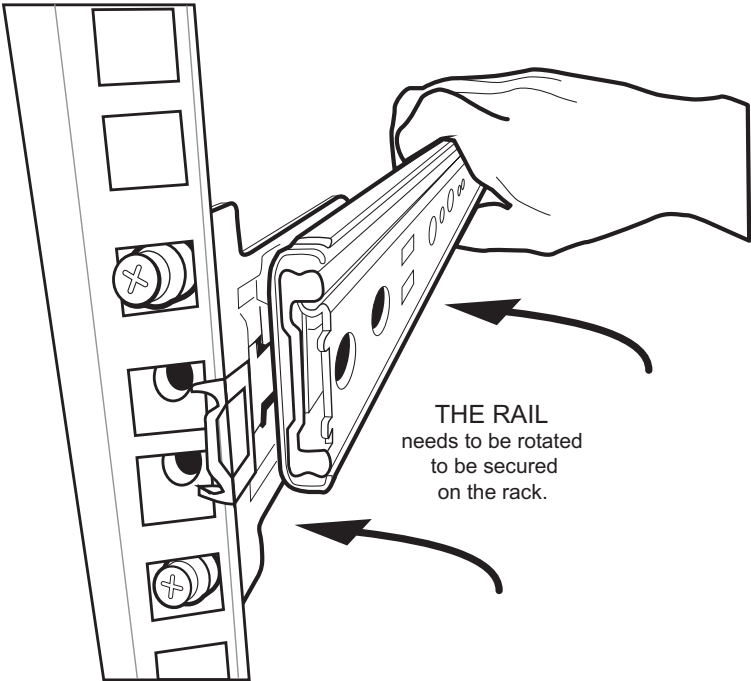


Figure 2.1 Securing the Slider Rail to the Front of the Equipment Rack

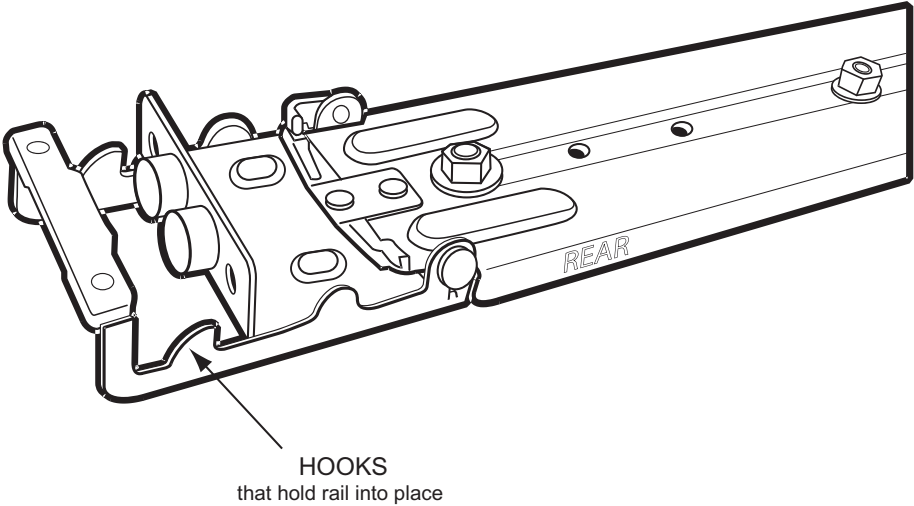


Figure 2.2 Detail View of Slider Rail Rear Retaining Hooks

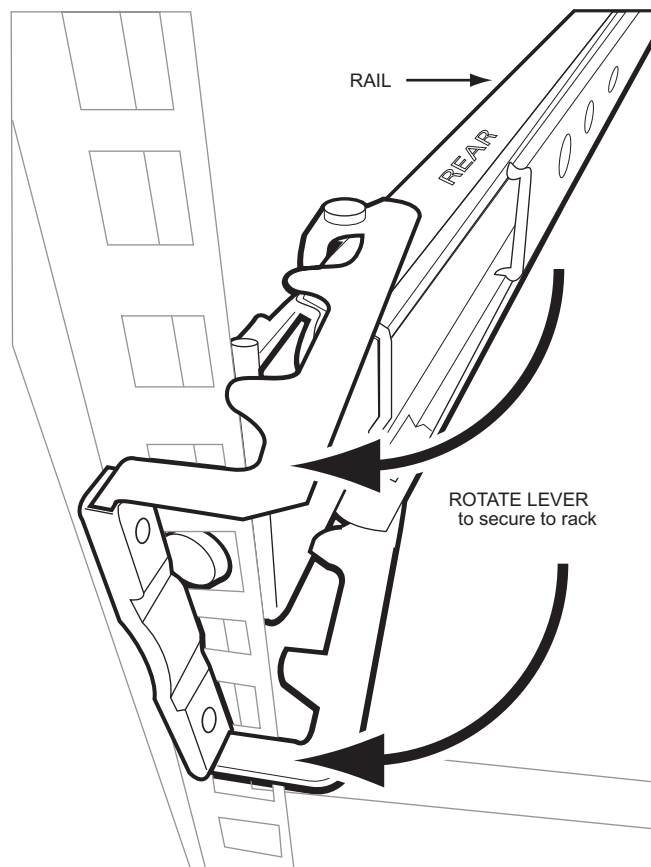


Figure 2.3 Detailed View of Slider Rail Rear Retaining Hooks being Locked onto the Rear of the Equipment Rack

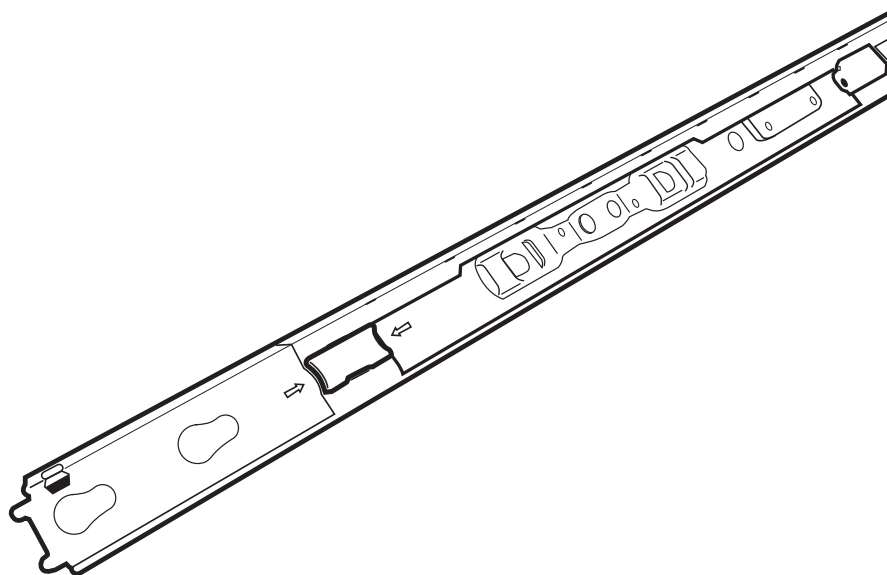


Figure 2.4 Detailed View of the Slider Rail Release Mechanism

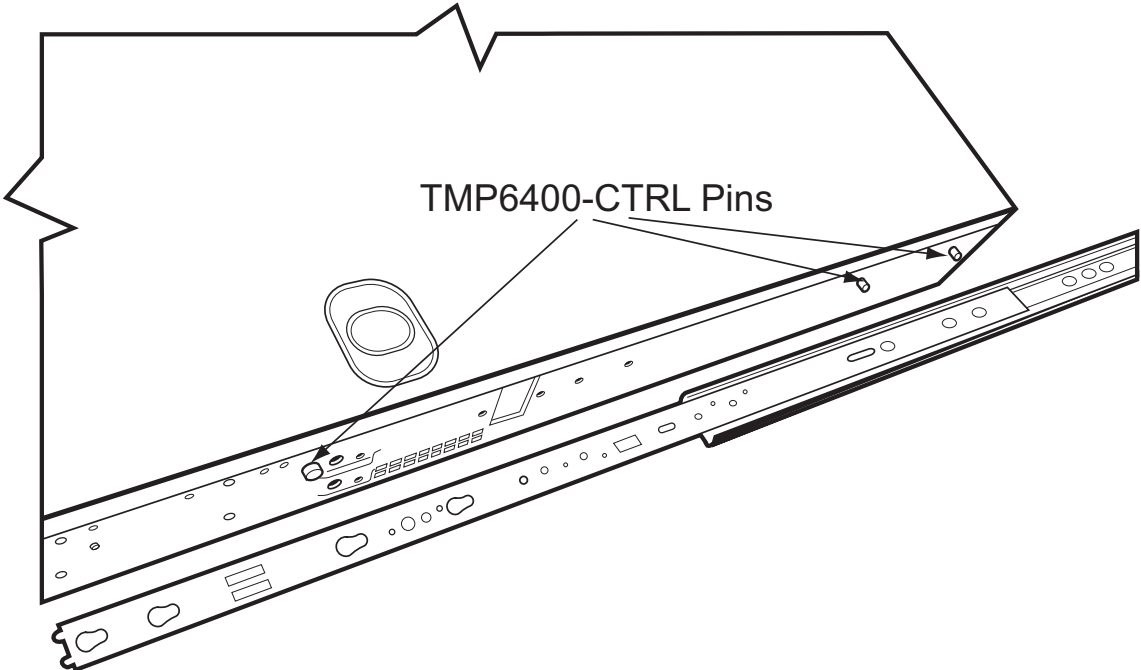


Figure 2.5 Attaching Sliding Rails to the TMP6400-CTRL Mounting Pins

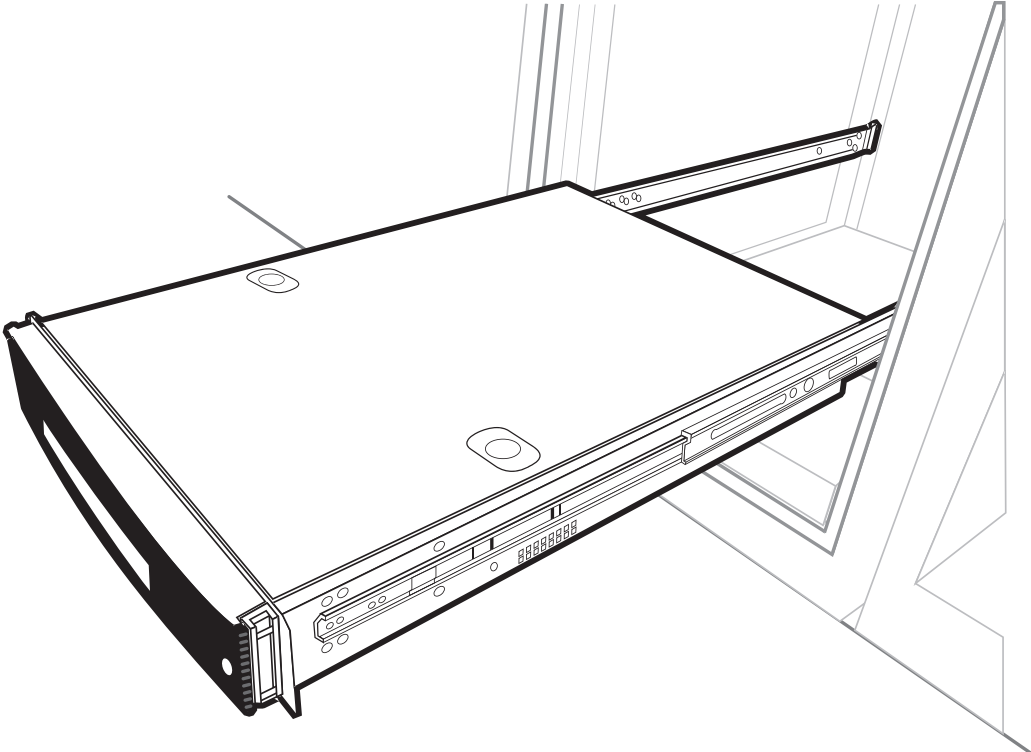


Figure 2.6 TMP6400-CTRL Installed on Slider Rails in the Fully Extended Position

Method Two: Fixed Brackets

1. Install the fixed brackets on the TMP6400-CTRL, adjusting their position in accordance with the equipment rack depth. See figure 2.7 on page 16.
2. Mount the TMP6400-CTRL on the equipment rack.
3. Secure it in place using the screws provided with the bracket. See figure 2.8 on page 16 and figure 2.9 on page 17.

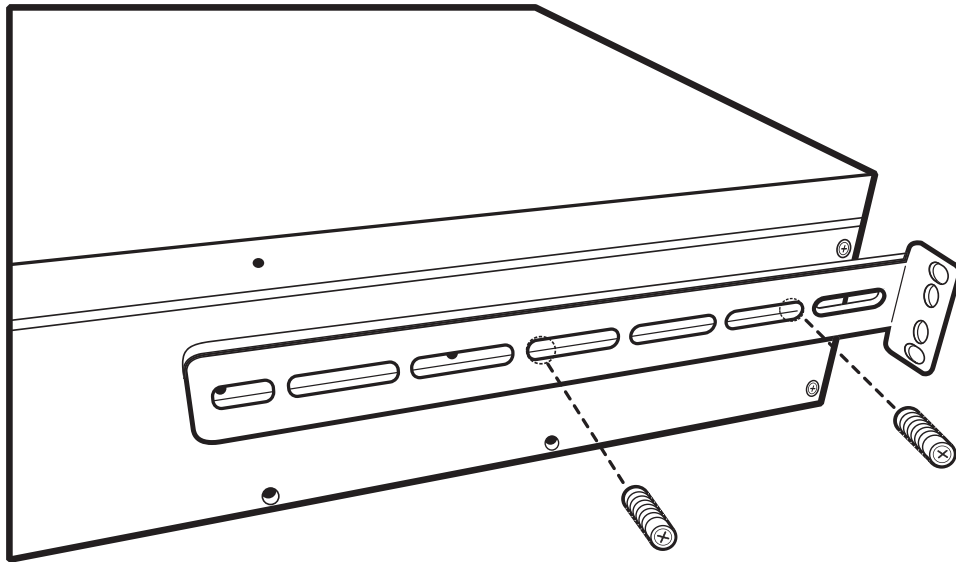


Figure 2.7 Attaching the Rear Brackets to the TMP6400-CTRL

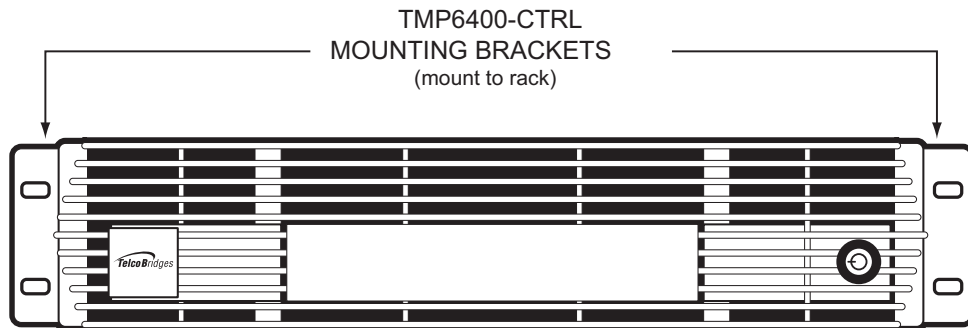


Figure 2.8 Front View of TMP6400-CTRL with Front Mounting Brackets

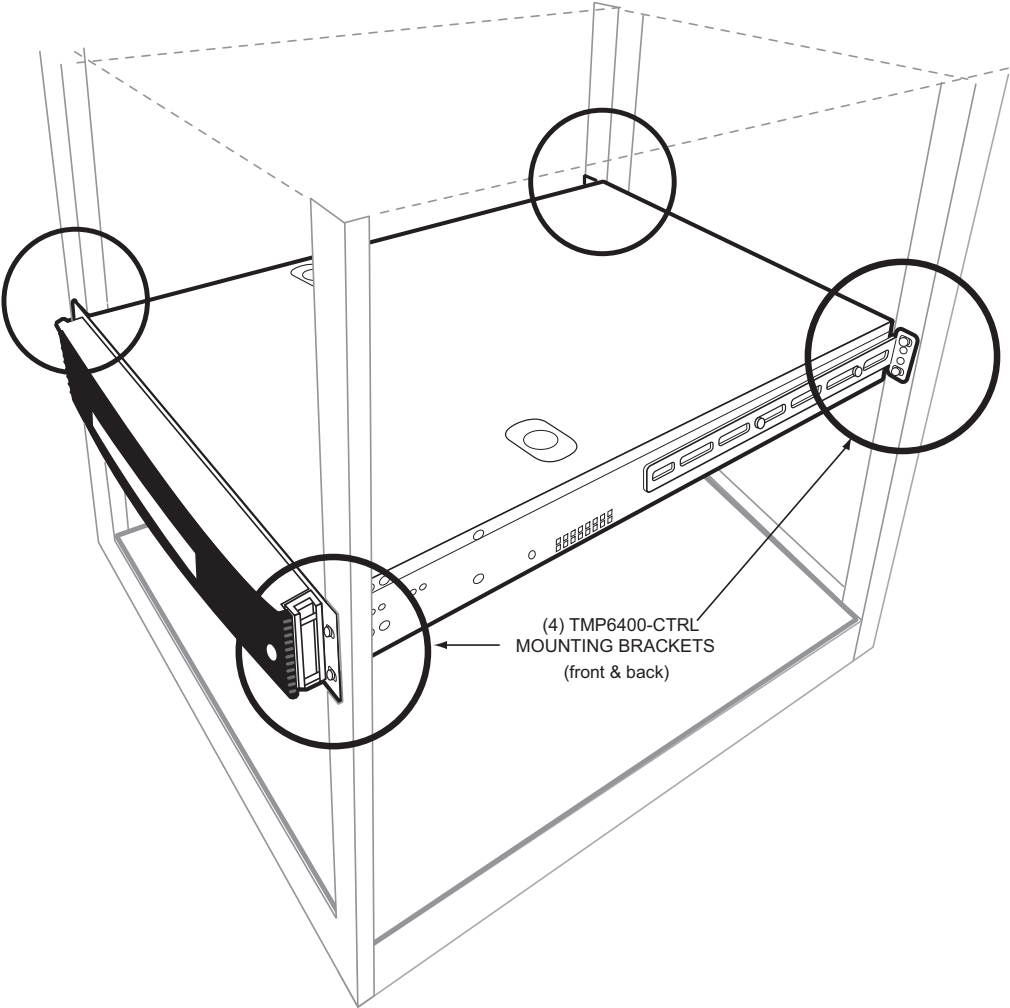


Figure 2.9 TMP6400-CTRL Installed in the Equipment Rack

Installing the Hard Drives

To install the hard drives, do the following:

1. Using the bezel key, unlock and remove the TMP6400-CTRL front bezel. See figure 2.10 on page 18, figure 2.12 on page 19, and figure 2.13 on page 19.
2. Using the hard disk key, open the top hard disk tray. See figure 2.14 on page 20, and figure 2.15 on page 20.
3. Insert the top disk drive. See figure 2.11 on page 18 and figure 2.16 on page 21.
4. Close the top hard disk tray. See figure 2.17 on page 21.
5. Repeats steps 2-4 to install the bottom disk drive.
6. Reinstall the front bezel.

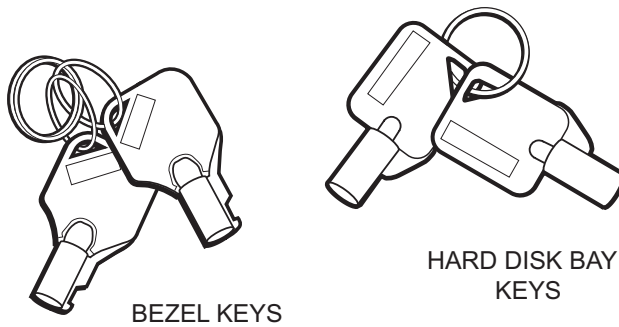


Figure 2.10 Bezel and Hard Disk Keys

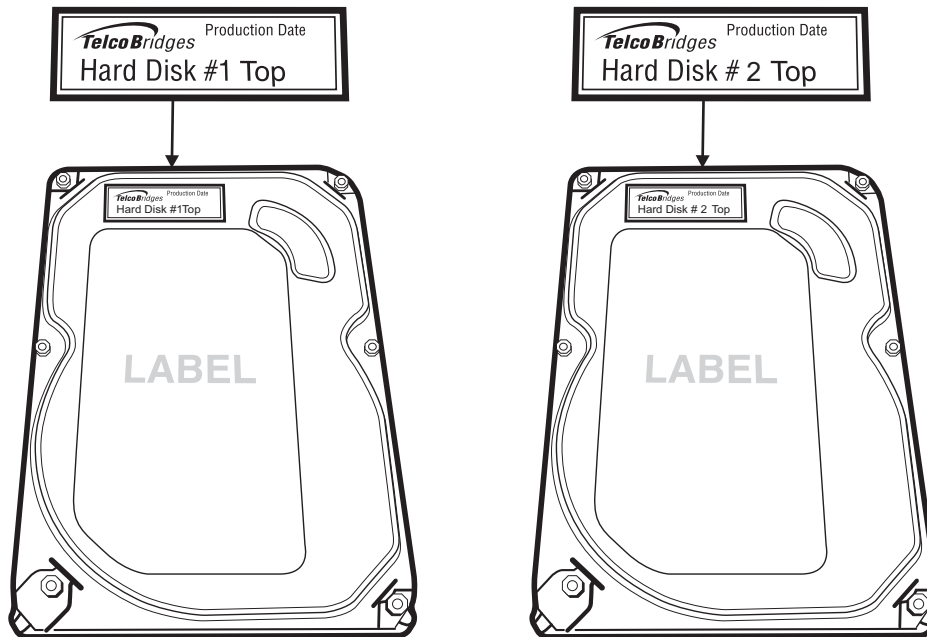


Figure 2.11 Top View of Hard Disks 1 and 2.

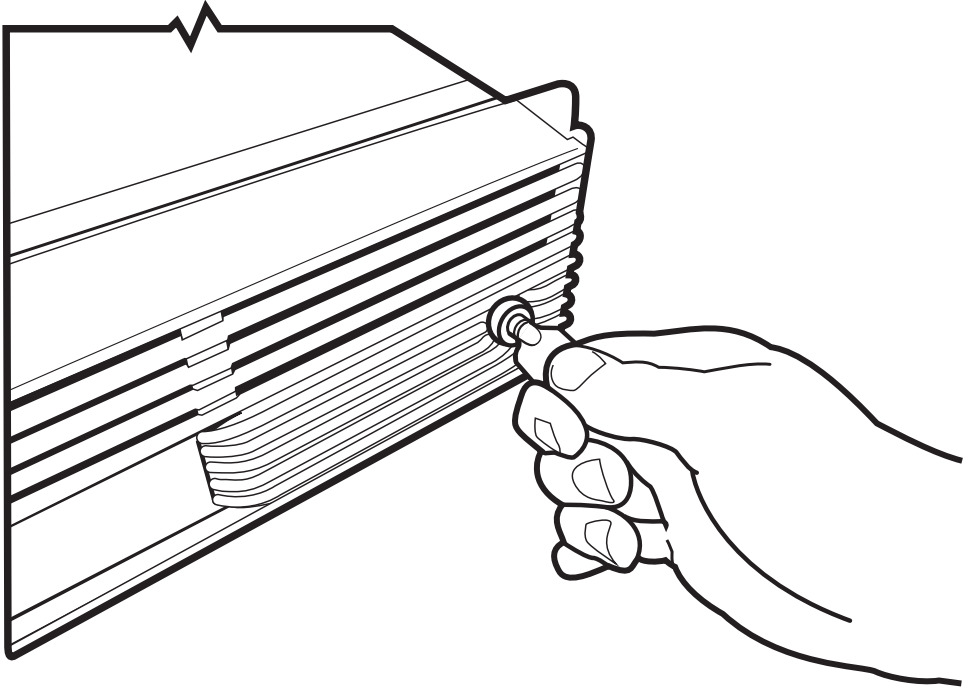


Figure 2.12 Unlocking the Front Bezel of the TMP6400-CTRL

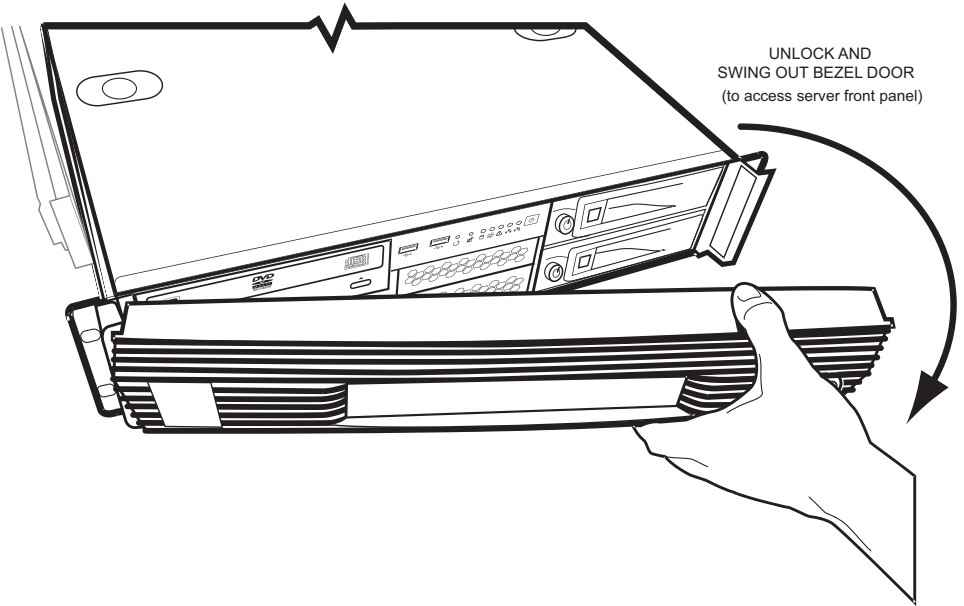


Figure 2.13 Opening the Front Bezel to Access the Hard Disks of the TMP6400-CTRL

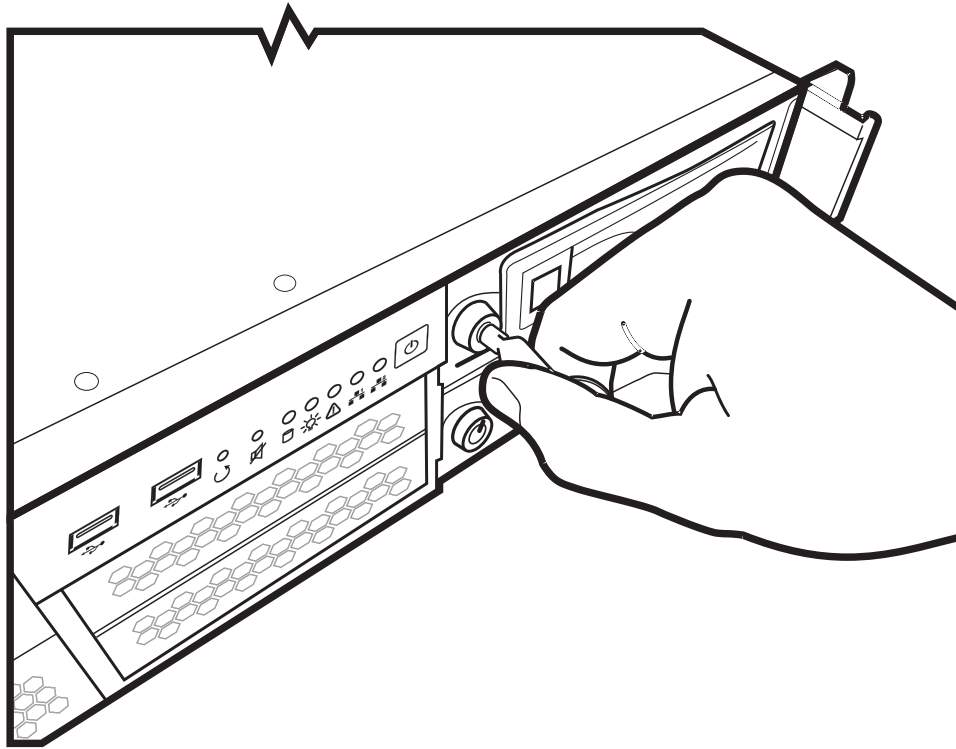


Figure 2.14 Unlocking the Hard Disk Door

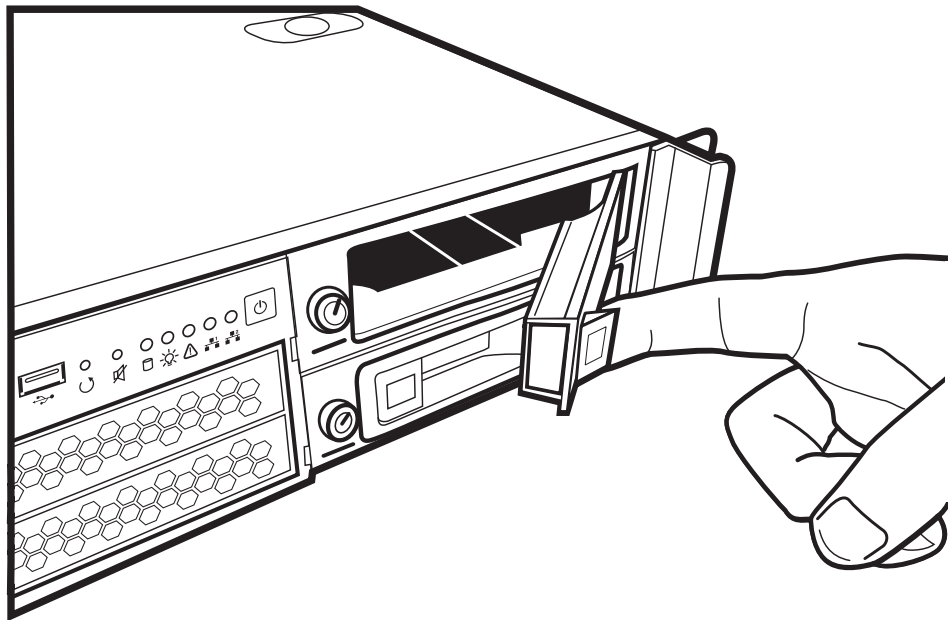


Figure 2.15 Opening the Hard Disk

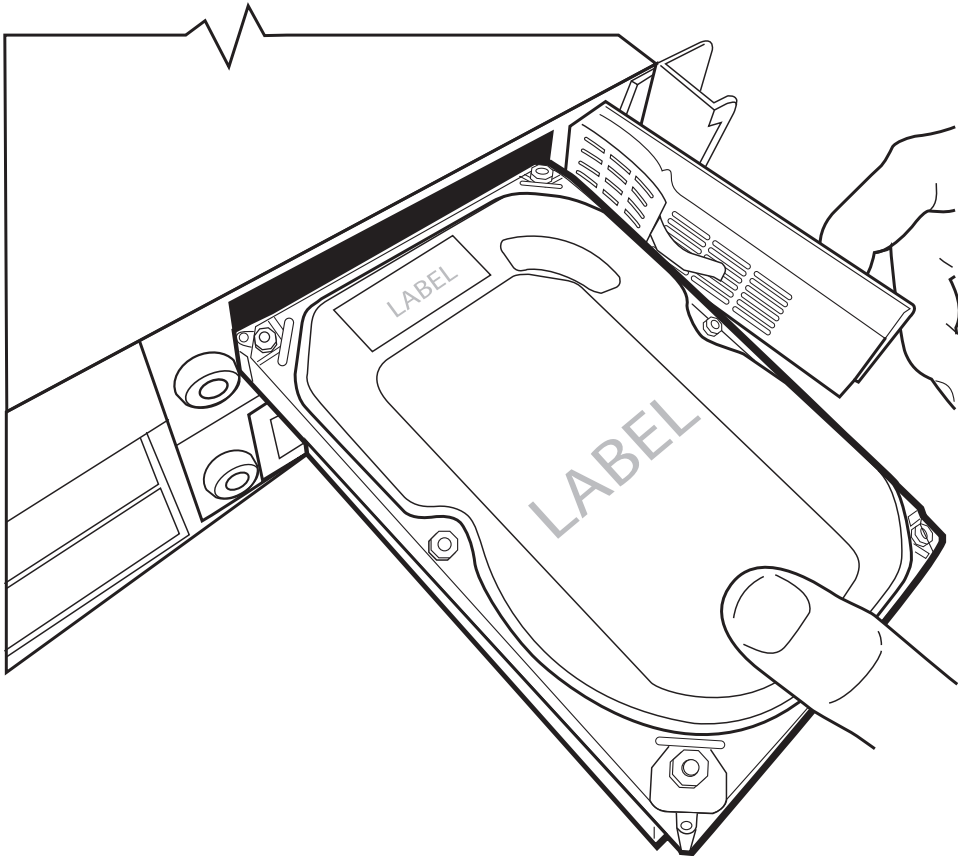


Figure 2.16 Inserting the Hard Disk

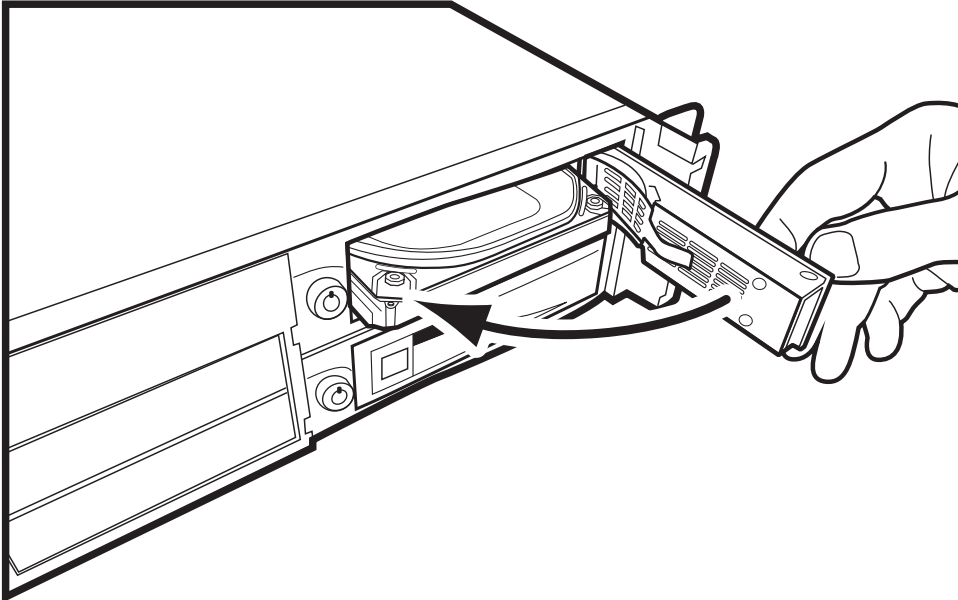


Figure 2.17 Closing the Hard Disk Door

2.2.3.2 TMP6400 Telecom Units

Mounting the TMP6400 Telecom Unit(s):

1. Using four metal screws, attach one angle bracket to the front, left-hand side of the TMP6400 Telecom Unit, when viewed from the front. Do the same for the angle bracket on the right-hand side.
2. Start mounting equipment beneath the TMP6400-CTRL, keeping in mind the space required on the equipment rack as described in Section 2.2.2 “Vertical Placement of Tdev TMP6400 Development Platform Equipment” on page 11.
3. Repeat steps 1 and 2 for each additional TMP6400 Telecom Unit.

Note If you are installing TMP6400-TE units you will require one (1) to two (2) patch panels per TMP6400-TE. Mount the patch panels beneath each TMP6400-TE.

2.2.3.3 TMP6400-TMS

Mounting the TMP6400-TMS Unit(s):

1. Using four metal screws, attach one angle bracket to the front, left-hand side of the TMP6400-TMS, when viewed from the front. Do the same for the angle bracket on the right-hand side.
2. Start mounting equipment beneath the last TMP6400 Telecom Unit, keeping in mind the space required on the equipment rack as described in Section 2.2.2 “Vertical Placement of Tdev TMP6400 Development Platform Equipment” on page 11.
3. Repeat steps 1 and 2 for a second TMP6400-TMS.

2.3 TMP6400-CTRL

This section covers the following procedures:

- Section 2.3.1 “Connecting to the System Management Interface” on page 24.
- Section 2.3.2 “Connecting to the Tmedia Control Network” on page 25.
- Section 2.3.3 “Powering Up” on page 26.
- Section 2.6 “Start Up” on page 44.

2.3.1 Connecting to the System Management Interface

The Tmedia Management Interface enables administrators to perform management tasks on a TMP6400-CTRL.

Prerequisites

To communicate with the Tmedia Management Interface, the following is needed:

- One CAT5 Ethernet cable with RJ45 male-male terminations.

Note Ethernet cables are not supplied with the TMP6400-CTRL.

To communicate with the Tmedia Management Interface:

1. Connect an RJ45 cable from the TMP6400-CTRL to a Gigabit Ethernet switch.

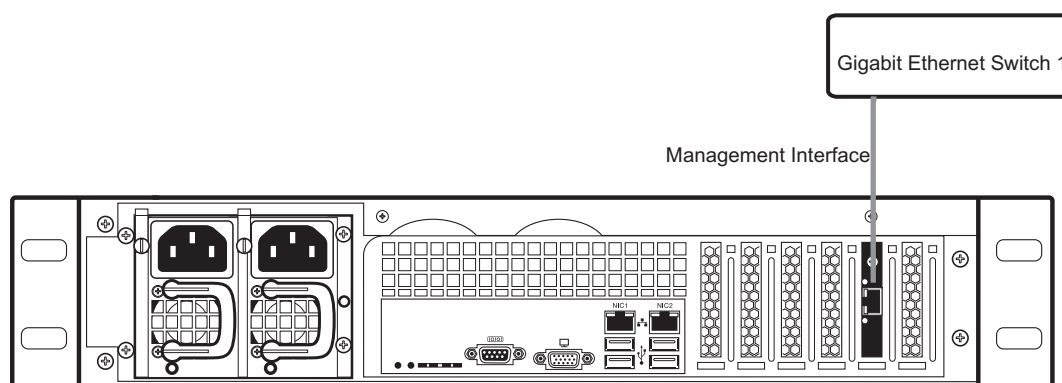


Figure 2.18 TMP6400-CTRL System Management Interface

2.3.2 Connecting to the Tmedia Control Network

The Tmedia Control network enables communication between the TMP6400-CTRL, the TMP6400 Telecom Unit(s), and the TMP6400-TMS.

Prerequisites

To connect the TMP6400 to the Tmedia control network, you will need:

- Two CAT5 Ethernet cables with RJ45 male-male terminations.

Connections

The TMP6400-CTRL is connected to the Tmedia control network using two CAT5 Ethernet cables, as shown in figure 2.22 on page 29.

To connect to the Tmedia control network:

1. Connect the NIC1 connector on the TMP6400-CTRL to the Tmedia Control network switch one.
2. Connect the NIC2 connector on the TMP6400-CTRL to the Tmedia Control network switch two.

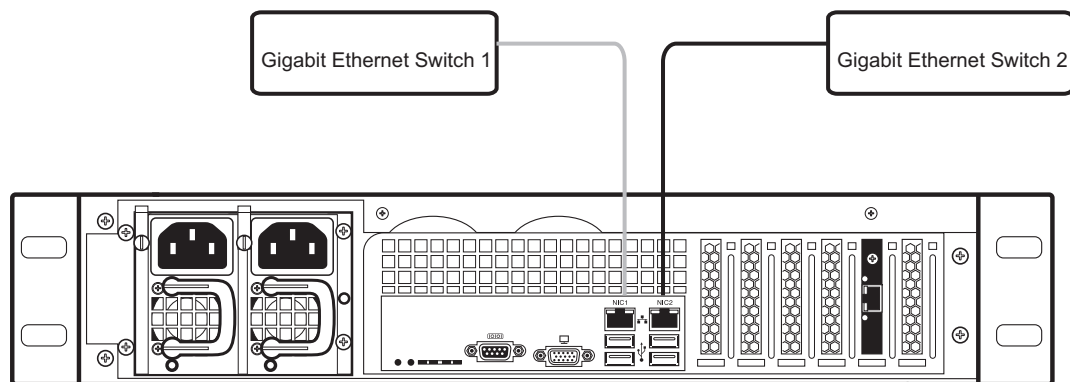


Figure 2.19 Connecting to the Tmedia Control Network

2.3.3 Powering Up

The TMP6400-CTRL is furnished with two (2) AC or two (2) DC power connections. Only once all other equipment installation work has been completed should the Tdev Development Platform be powered up.

Prerequisites

To power the TMP6400-CTRL, you will need:

- Two independent AC or DC power sources.
- Two power cables.

2.3.3.1 Connecting to AC Power

The TMP6400-CTRL is furnished with two AC power connectors.

To connect the TMP6400-CTRL to AC Power:

1. Connect the first power connector of the TMP6400-CTRL to the first power source. See Figure 2.20.
2. Connect the second power connector of the TMP6400-CTRL to the second power source.

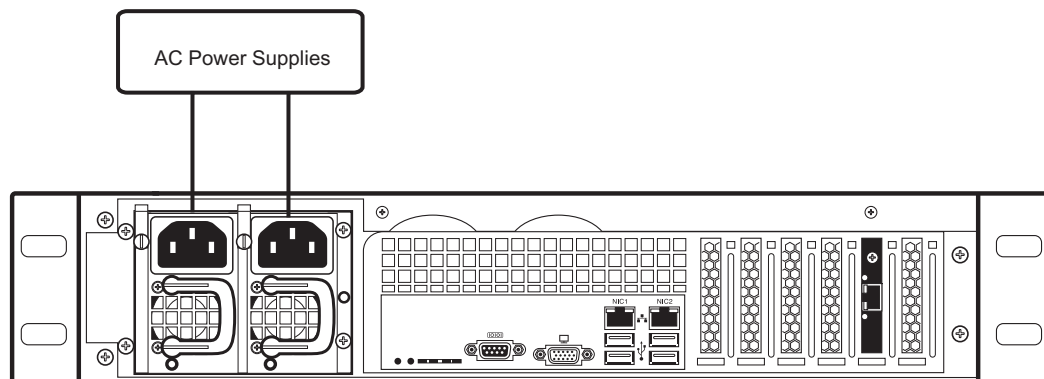


Figure 2.20 TMP6400-CTRL AC Power Connections

2.3.3.2 Connecting to DC Power

The TMP6400-CTRL is furnished with two DC power connection ports. In addition, each DC powered TMP6400-CTRL is supplied with two DC power cables.

To connect the TMP6400-CTRL to DC Power

1. Connect the first DC power connector of the TMP6400-CTRL to DC power source one. See figure 2.21 on page 27.
 - 1a. Connect one lead of each DC power cable to the positive terminal of the DC power source.
 - 1b. Connect the other lead of each DC power cable to the negative side of the DC power source.
2. Repeat the previous steps for DC power source two.

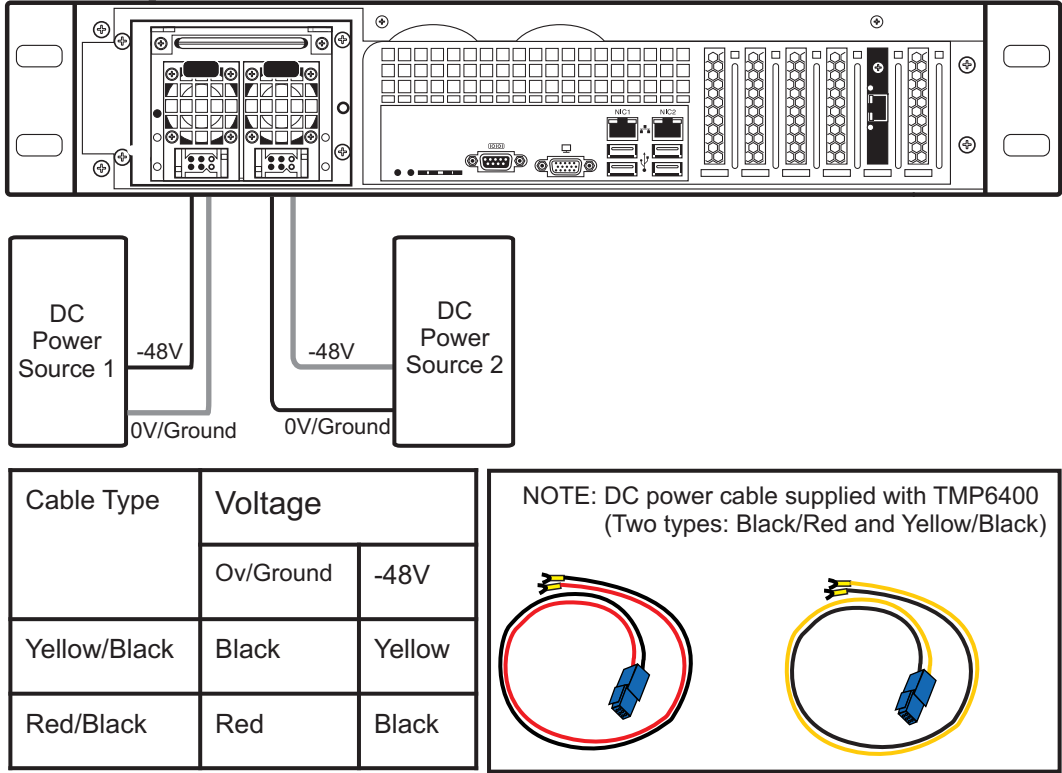


Figure 2.21 TMP6400-CTRL DC Power Connections

2.4 TMP6400 Telecom Unit

This section covers the following procedures:

- Section 2.4.1 “Connecting to the Tmedia Control Network” on page 29.
- Section 2.4.2 “Connecting to the VoIP Network(s)” on page 30.
- Section 2.4.3 “Connecting to the PSTN” on page 31.
- Section 2.4.4 “Connecting to the TMS Network” on page 36.
- Section 2.4.5 “Powering Up” on page 39.

2.4.1 Connecting to the Tmedia Control Network

The Tmedia Control network enables communication between the TMP6400-CTRL, the TMP6400 Telecom Unit(s), and the TMP6400-TMS.

Prerequisites

To connect the TMP6400 Telecom Unit(s), you will need:

- Two CAT5 Ethernet cables with RJ45 male-male terminations for each TMP6400 Telecom Unit.

Connections

The TMP6400 Telecom Unit(s) are connected to the Tmedia control network using two CAT5 Ethernet cables, as shown in figure 2.22 on page 29.

To connect to the Tmedia control network:

1. Connect the ETH0 connector on the TMP6400 Telecom Unit to the Tmedia Control network switch one.
2. Connect the ETH1 connector on the TMP6400 Telecom Unit to the Tmedia Control network switch one.
3. Repeat steps 1 and 2 for each additional TMP6400 Telecom Unit.

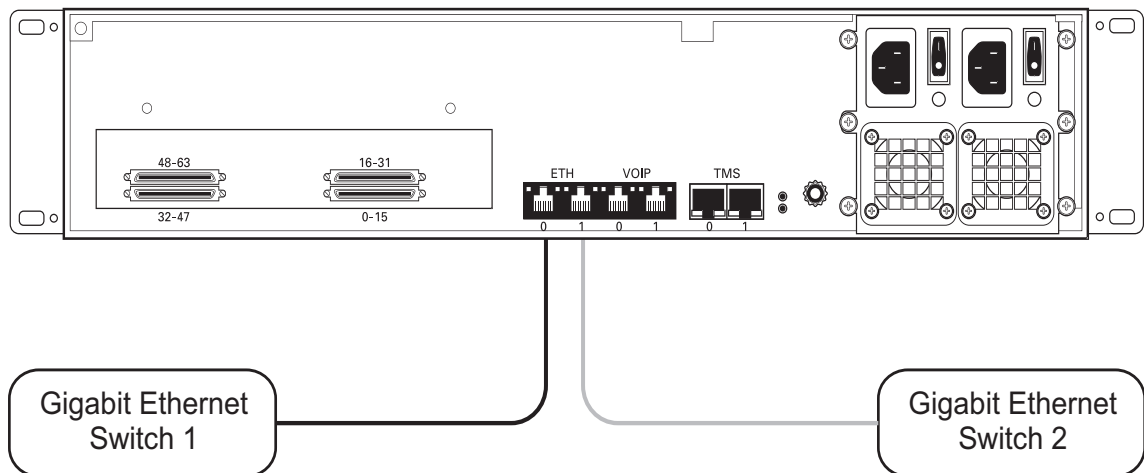


Figure 2.22 Connecting to the Tmedia Control Network

2.4.2 Connecting to the VoIP Network(s)

Each TMP6400 Telecom Unit features dual GigE ports for connection to different VoIP networks. This provides an access point to manage VoIP traffic. Should one of the IP networks fail, the TMP6400 Telecom Units will continue to manage VoIP traffic using the alternate network.

The IP address of the VoIP ports can be modified using the web portal.

Note: The TMP6400 Telecom Units require two (2) gigabit layer 2 Ethernet switches.

Prerequisites

To connect the TMP6400 Telecom Units to the VoIP network, you will need:

- Two gigabit layer 2 Ethernet switches. A second one is required to support redundancy of the VoIP interface.
- Two CAT5 Ethernet cables with RJ45 male-male terminations.
- Two IP addresses located on different subnets.

Connections

The TMP6400 Telecom Units are connected to the VoIP network through two Ethernet GigE network links, as shown in figure 2.23 on page 30.

To connect to the VoIP network:

1. Connect the VoIP0 connector from each TMP6400 Telecom Unit to the first Ethernet switch.
2. Connect the VoIP1 connector from each TMP6400 Telecom Unit to the second Ethernet switch.

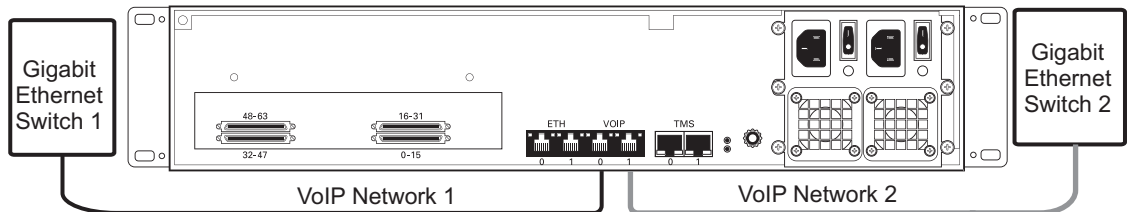


Figure 2.23 Connecting to the VoIP Network

2.4.3 Connecting to the PSTN

The TMP6400 Telecom Units feature a variety of interfaces to the PSTN network.

Prerequisites

To connect the TMP6400 Telecom Unit to the PSTN network, you must comply with one of the following:

- Your TMP6400-TE features SCSI connectors for connection to T1/E1 lines. You will require one patch panel for each 32 line grouping of T1/E1 line interfaces with 2 SCSI cables per patch panel (supplied). Each T1/E1 line interfaces requires a RJ48C to connect to the PSTN (not supplied).
- Your TMP6400-DS3 features BNC connectors for connection to DS3 lines. You will require two coaxial cables for each DS3 interface.
- Your TMP6400-STM1 features electrical or optical STM-1 connectors. You will require two fibre optic cables for each STM-1 interface.

2.4.3.1 SCSI Interface (T1/E1) for the TMP6400-TE

A TMP6400-TE with 4 SCSI connectors enables the connection to T1/E1 lines. The termination impedance is set at 120 ohms. It is possible to connect an external balun in order to convert to 75 ohms.

Note All ports may not be active. T1/E1 ports are activated by software license; the number of active ports depends on the licenses purchased.

Patch panels use straight connections. In other words, they do not cross the RX and TX signals. Connections between the patch panels and the TMP6400 require straight cables. The supplied SCSI cables are straight cables. Cables used to connect the network to the patch panel must do the cross connection.

To connect the TMP6400-TE to the PSTN:

1. Start with SCSI ports 0-15 located at the bottom right as shown in figure 2.24 on page 33. Connect one SCSI cable between this port and SCSI patch panel number 1, ports 0-15. Connect SCSI ports 16-31 to patch panel number 1, ports 16-31.
2. Repeat step 1, using lines 32-63 and a second patch panel. Connect lines 32-47 to patch panel 2, ports 0-15. Connect lines 48-63 to patch panel 2, ports 16-31.

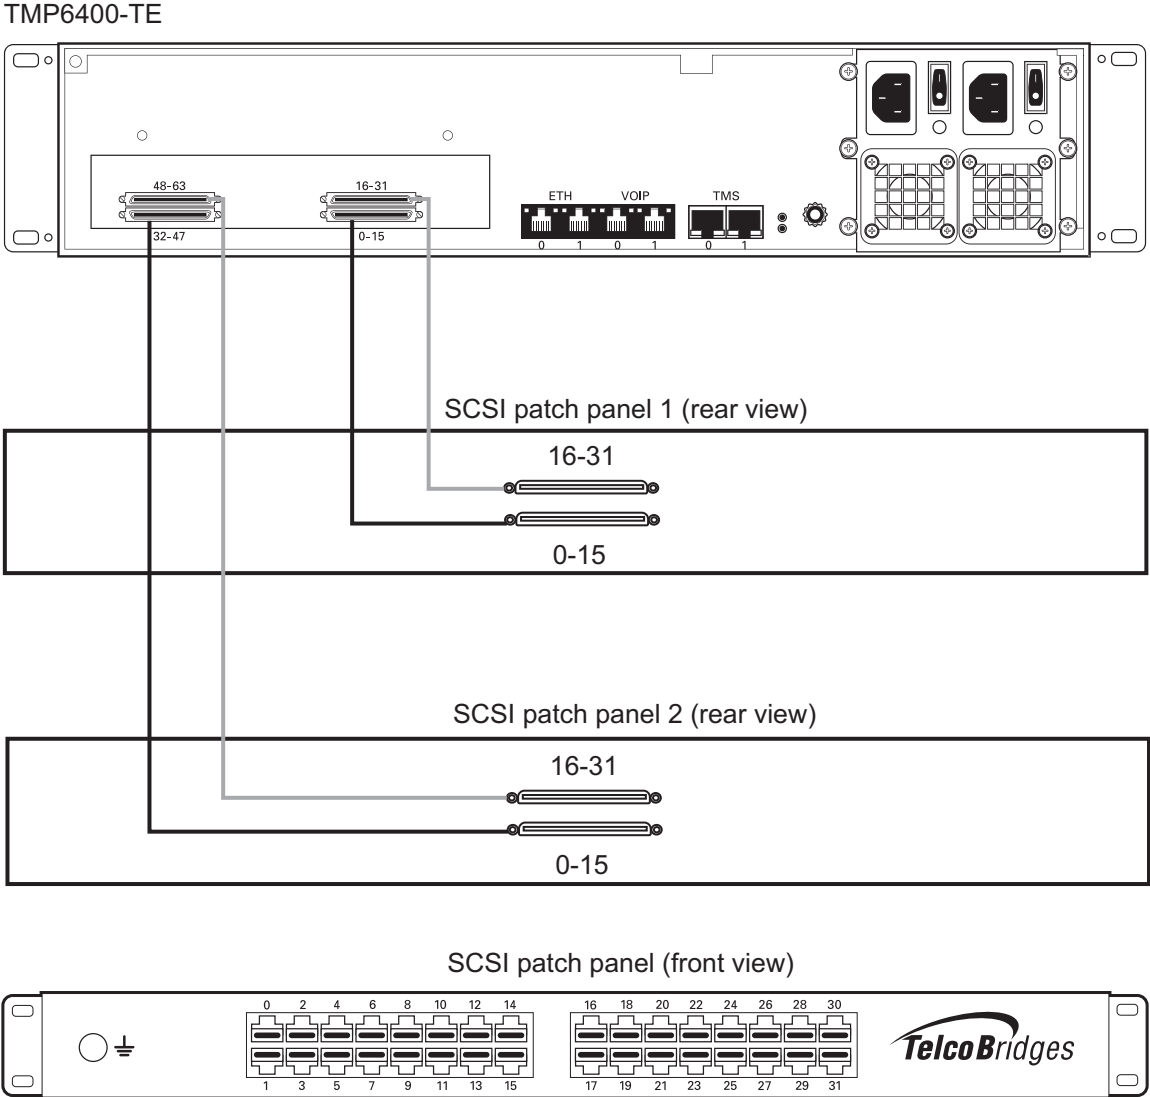


Figure 2.24 TMP6400 with SCSI connectors

2.4.3.2 Dual BNC Interface (DS3) for the TMP6400-DS3

A TMP6400-DS3 with 3 sets of BNC connectors enables the connection to DS3 lines. See figure 2.25 on page 34.

Note All ports may not be active. DS3 ports are activated by software license; the number of active ports depends on the licenses purchased.

To connect the TMP6400-DS3 to the PSTN:

1. Start with the Dual BNC port pair #0 (right-most) as shown in figure 2.25 on page 34. Connect one pair of BNC cables between this port and the DS3 line.
2. Repeat step 1, using the next available pair of BNC PSTN interface ports.

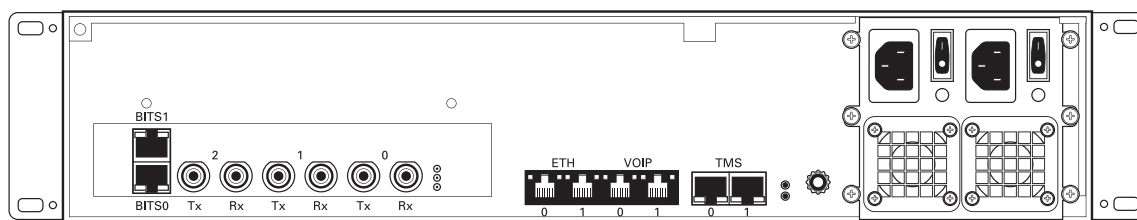


Figure 2.25 DS3 Interface to the PSTN

Note The (TMP6400-DS3 / TMP6400-STM1) features 2 Bits interfaces that can be used to synchronize the TDM network. It is recommended that you connect the Bits interface to the bits port of the TMP6400-TMS, if there is one installed in your system.

2.4.3.3 Optical Interface (OC3/STM-1) for the TMP6400-STM1

A TMP6400-STM-1, with one main and one backup OC3 or STM1 port enables connection to OC3/STM1 lines. See figure 2.26 on page 35. Refer to table 2.2 on page 35 for a listing of optical interfaces. The default SFP module for OC3/STM1 connection is SMF, intermediate reach, (SFP-OC3-IR1) 1310 nm with LC type connectors.

Note Please make certain that the correct SFP model is selected at the time of ordering. If your installation requires a different model from the one that has been provided, you must replace it.

Table 2.2 Optical Interfaces

| Transceiver Model | Description | Spec | Mode | Type | Range (Km.) | Wavelength (NM) | Connection |
|-------------------|--------------------|---------------|----------------|--------------------|-------------|-----------------|-----------------|
| SFP-OC3-IR1 | OC3/STM1 | Hot Pluggable | Single-mode | Intermediate reach | 15 | 1310 | LC |
| SFP-STM1E | STM1E (Electrical) | Hot Pluggable | 75 ohms Cooper | Max 180m | 1 | NA | DIN (mini-coax) |

Automatic Protection Switching

The APS port is used for OC3/STM1 redundancy. Switchover occurs automatically based on configurable parameters. It is recommended that APS be used if the installation provides this feature.

To connect the TMP6400-STM1 (Optical Interface) to the PSTN:

1. Connect a fiber optic cable between the Port 0 (Main) port and OC3/STM1 line, as shown in figure 2.26 on page 35.
2. Connect a fiber optic cable between the Port 1 (APS) port and OC3/STM1 line.

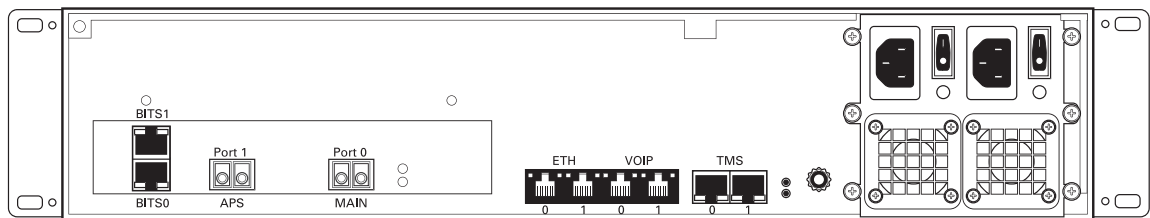


Figure 2.26 Optical Interface to the PSTN

Note The (TMP6400-DS3 / TMP6400-STM1) features 2 Bits interfaces that can be used to synchronize the TDM network. It is recommended that you connect the Bits interface to the bits port of the TMP6400-TMS, if there is one installed in your system.

2.4.4 Connecting to the TMS Network

Note Each connection from a TMP6400 Telecom Unit to the TMS network requires one CAT7 shielded ethernet crossover cable with RJ45 type male-male connectors.

2.4.4.1 Connecting to the TMP6400 Telecom Units

The TMP6400-TMS enables you to scale your system by interfacing as many as 16 TMP6400 Telecom Units with the TMP6400-TMS Switch network, building a non-blocking system of up to 32,768 channels. A second TMP6400-TMS provides your system with an active/standby high availability architecture.

Prerequisites

To interconnect the TMP6400 Telecom Units with the TMP6400-TMS, you will need:

- One CAT7 shielded Ethernet crossover cable with RJ45 type male-male terminations for each TMP6400 Telecom Unit connected to the TMG700-TMS.
- If your system features a second TMP6400-TMS, you will require an additional CAT7 shielded Ethernet cable with RJ45 male-male terminations for each TMP6400 Telecom Unit.

Interconnections

See figure 2.29 on page 38 for an Ethernet crossover wiring diagram.

To interconnect the TMP6400-TMS:

1. Start with the TMP6400 Telecom Unit at the topmost position of the equipment rack and connect a CAT7 shielded Ethernet crossover cable to the TMS0 connector at the rear of the TMP6400 Telecom Unit, figure 2.27 on page 37. Connect the other end of the same CAT7 cable to the first port of the first TMP6400-TMS.

Note Ensure that the TMS0 port of each Telecom Unit connects to the same TMP6400-TMS switch.

2. If your system employs a second TMP6400-TMS, connect a second CAT7 shielded Ethernet crossover cable to TMS1 at the rear of the TMP6400 Telecom Unit, figure 2.27 on page 37. Connect the other end of the same CAT7 cable to the first port of a second TMP6400-TMS.

Note Ensure that the TMS1 port of each Telecom Unit connects to the same TMP6400-TMS switch.

3. Repeat steps 1-2 for each TMP6400 Telecom Unit until they have all been connected to the TMP6400-TMS.

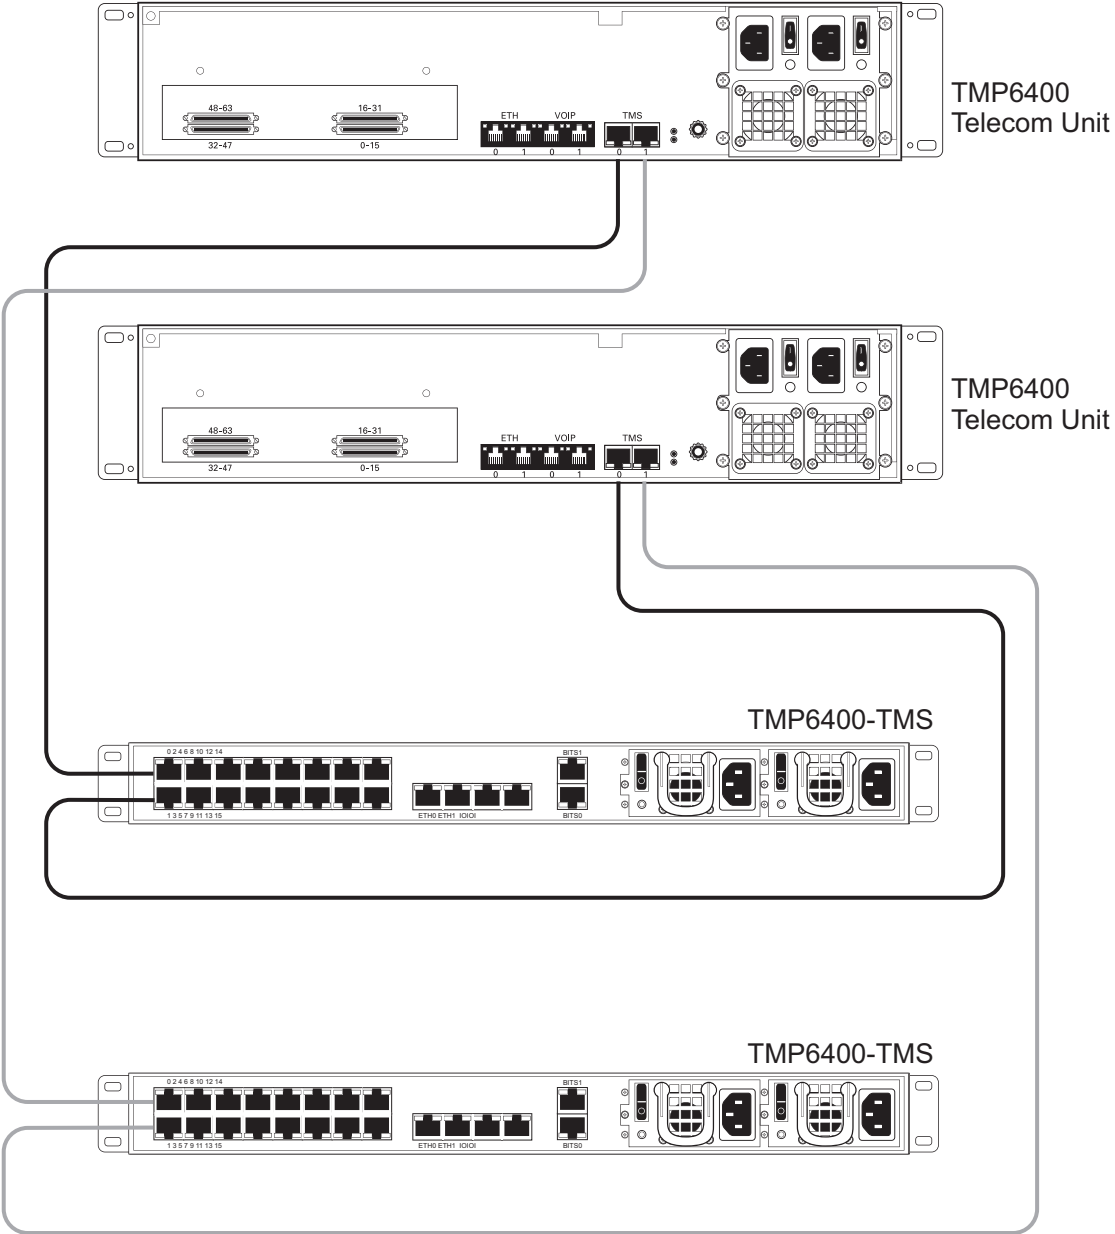


Figure 2.27 Example of Interconnecting 2 TMP6400 Telecom Units to an active and standby TMP6400-TMS

2.4.4.2 Interconnecting Two TMP6400 Telecom Units

If your TMP6400 Development Platform has no more that two TMP6400 Telecom Units, they can be connected to each other without the use of a TMP6400-TMS switch.

Simply connect the TMS0 ports of each unit together using a CAT7 shielded cross-over cable with RJ45 male-male terminations. Do the same for the TMS1 ports of each unit. See figure 2.28 on page 38.

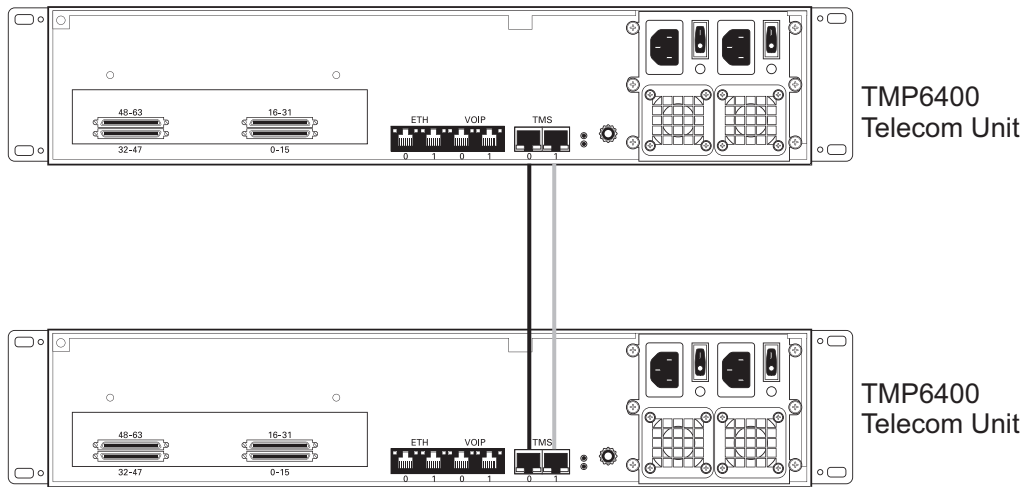


Figure 2.28 Interconnecting two TMP6400 Telecom Units.

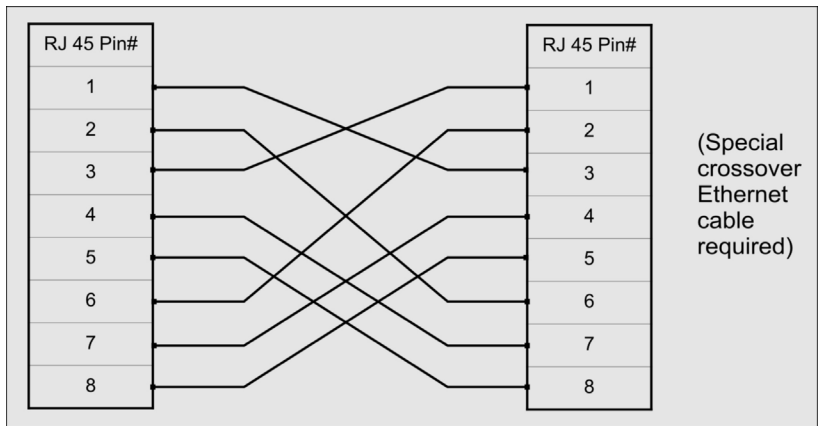


Figure 2.29 Ethernet Crossover Cable

2.4.5 Powering Up

The TMP6400 Telecom Units are furnished with two AC or DC power connections. Only once all other equipment installation work has been completed should the TMP6400 Telecom Unit be powered up.

2.4.5.1 Connecting to AC Power

Prerequisites

To power the TMP6400 Telecom Unit, you will need:

- One to two power sources.
- Two power cables.

The TMP6400 Telecom Unit AC model is furnished with two AC power connectors.

To connect the TMP6400 Telecom Unit to AC Power:

1. Connect an AC power cable between the AC connector of the TMP6400 Telecom Unit and an AC supply. See figure 2.30 on page 39.

Note If the TMP6400 Telecom Unit features a second power supply and it is not connected to an AC power source, press the green button located at the rear of the unit to disable the audible alarm. See figure 2.30 on page 39.

2. Power up the TMP6400 Telecom Unit by turning on its power switch(es).

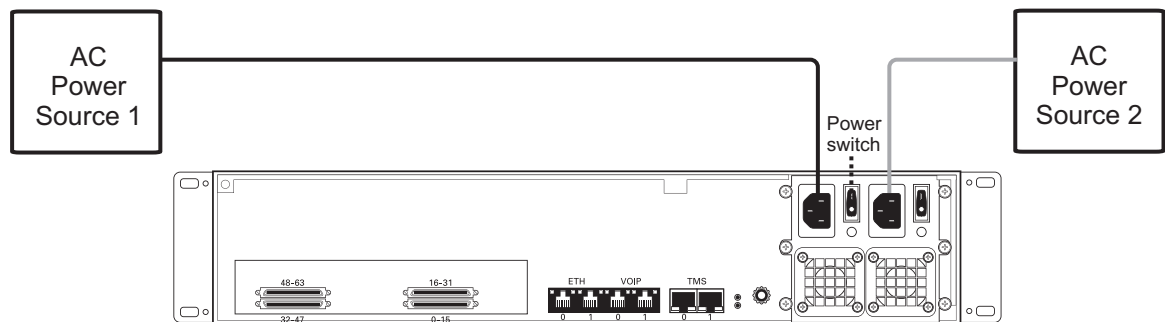


Figure 2.30 AC Power Connection

2.4.5.2 Connecting to DC Power

The TMP6400 Telecom Unit DC model is furnished with two DC power connection ports. In addition, each DC powered TMP6400 Telecom Unit is supplied with two DC power cables.

To connect the TMP6400 Telecom Unit to DC power:

1. Connect one DC cable, supplied with the TMP6400 Telecom Unit, as shown in figure 2.31 on page 40, to the DC outlet at the rear of the TMP6400 Telecom Unit.

Note Two types of cable with different coloring are available. Refer to figure 2.31 on page 40 for the appropriate wiring information.

2. Connect one lead of the DC power cable to the positive terminal of the DC power source.
3. Connect the other lead of the DC power cable to the negative side of the DC power source.
4. Repeat steps 1-3 for the second power DC power source.

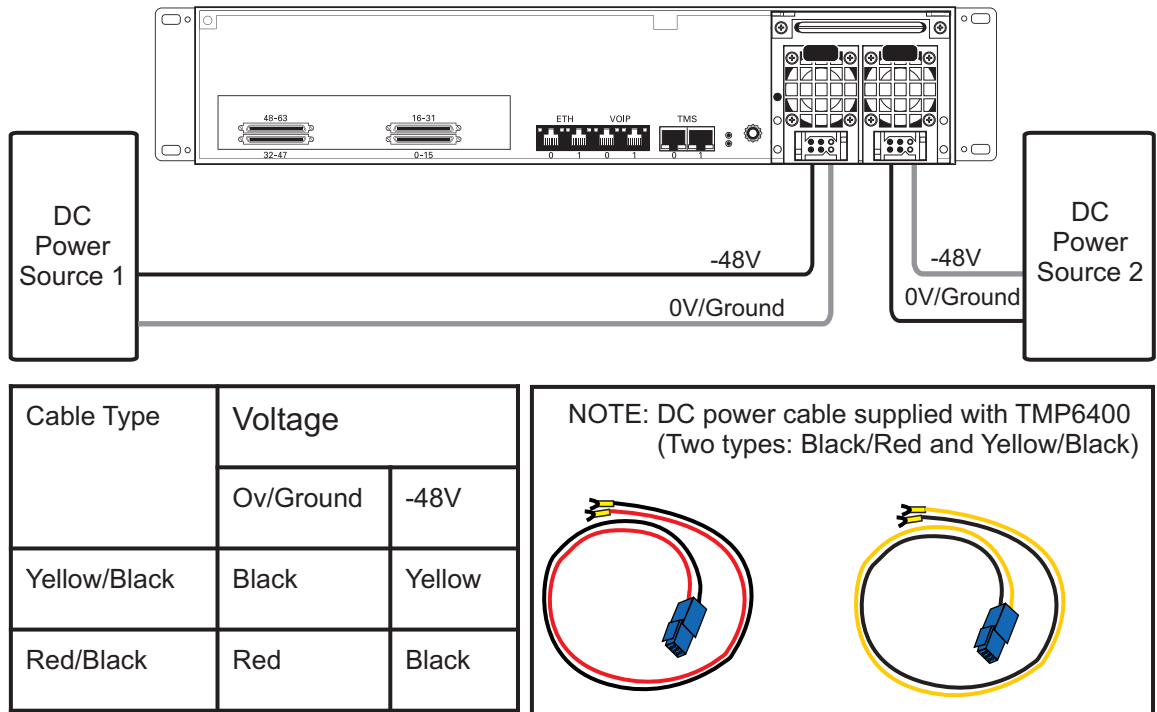


Figure 2.31 DC Power Connection

2.5 TMP6400-TMS

This section covers the following procedures:

- Section 2.5.1 “Connecting to the Tmedia Control Network” on page 41.
- Section 2.5.2 “Powering Up” on page 42.

2.5.1 Connecting to the Tmedia Control Network

The Tmedia Control network enables the communication between the TMP6400-CTRL, the TMP6400 Telecom Unit(s), and the TMP6400-TMS.

Prerequisites

To connect the TMP6400-TMS, you will need:


- Two CAT5 Ethernet cables with RJ45 male-male terminations.

Connections

The TMP6400-TMS is connected to the Tmedia control network using two CAT5 Ethernet cables, as shown in figure 2.22 on page 29.

To connect to the Tmedia control network:

1. Connect the ETH0 connector on the TMP6400-TMS to Tmedia Control network switch one.
2. Connect the ETH1 connector on the TMP6400-TMS to Tmedia Control network switch one.
3. Repeat step 1 and 2 for a second TMP6400-TMS.

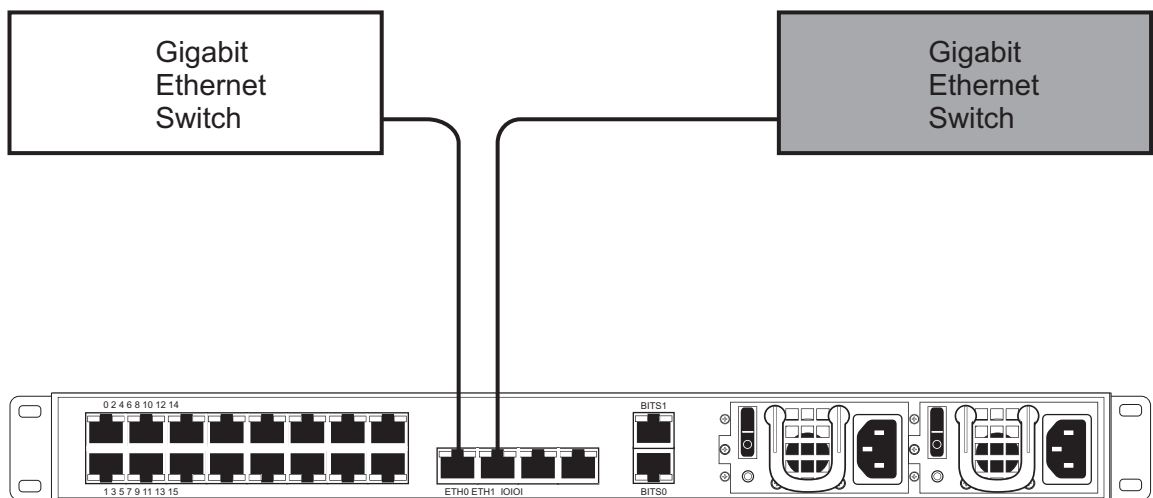

(Left=1, Right=2)

Figure 2.32 Connecting to the Tmedia Control Network

2.5.2 Powering Up

The TMP6400-TMS is with two (2) AC or two (2) DC power connections. Only once all other equipment installation work has been completed should the TMP6400-TMS be powered up.

Prerequisites

To power the TMP6400-TMS, you will need:

- Two independent AC power sources.
- Two power cables for each TMP6400-TMS.

2.5.2.1 Connecting to AC Power

The TMP6400-TMS AC models are furnished with two AC power connectors.

To connect the TMP6400-TMS to AC Power:

1. Connect the first power connector of each unit to the first power source. See Figure 2.33.
2. Connect the second power connector of each unit to the second power source.

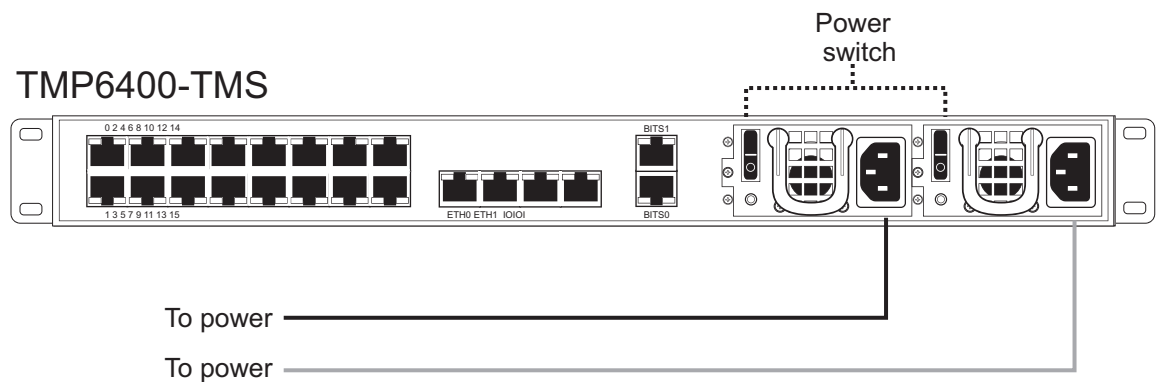


Figure 2.33 AC Power Connections

2.5.2.2 Connecting to DC Power

The TMP6400-TMS DC models are furnished with two DC power connection ports.

To connect the TMP6400-TMS to DC power:

1. Connect a ground wire to the ground lug located at the rear of the TMP6400-TMS, as shown in figure 2.34 on page 43.
2. Connect a 14 AWG wire between the positive terminal of a DC power source and the terminal on the TMP6400-TMS labelled \oplus .
3. Connect a 14 AWG wire between the negative terminal of a DC power source and the terminal on the TMP6400-TMS labelled 48V.
4. Repeat steps 1-3 for the second DC power source.
5. Turn on the DC power source.

TMP6400-TMS

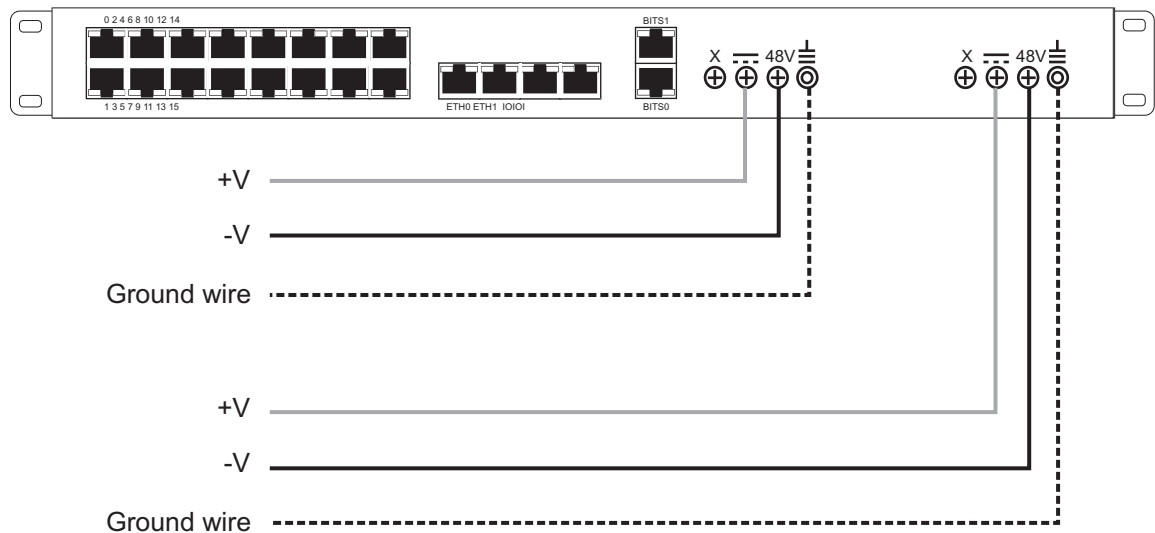


Figure 2.34 DC wiring diagram

2.5.3 TDM System Clock

The TMP6400 system must be synchronized with the TDM network. This can be done in several ways:

- Synchronized with an incoming trunk
- Synchronized with a SONET SDH
- Synchronized with a BITS port

If your system features a TMP6400-TMS and a BITS interface is available, it is recommended that the BITS interface be connected to the BITS port of the TMP6400-TMS.


2.6 Start Up

After powering up the TMP6400-CTRL, you must select one of the servers to be the primary server. If you have a second server, configure it as a secondary.

Once these configuration settings have been applied, your Tdev TMP6400 Development Platform will start up and display the web portal configuration management tool.


2.6.1 Primary

1. Connect to the web portal. The Welcome page appears.

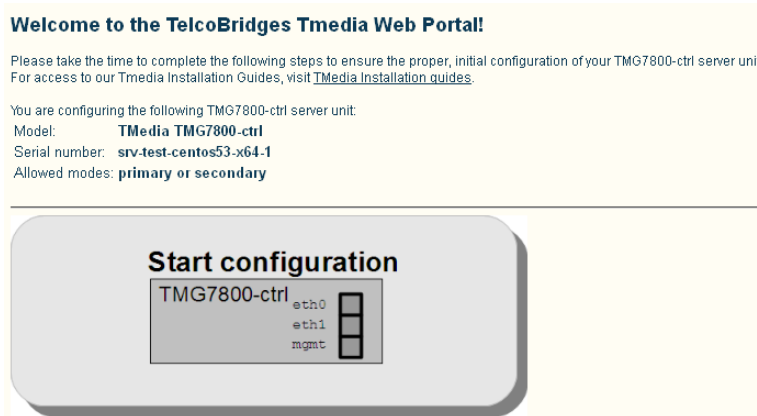


Note: The Welcome page indicates whether the TMP6400-CTRL is a primary or secondary unit.


2. Select the top portion of the image to configure the TMP6400-CTRL as a primary unit.

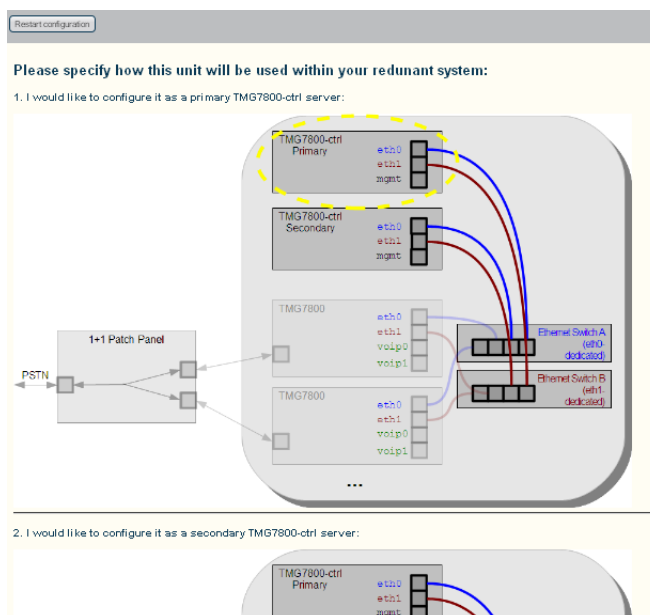

3. Select New Redundant.

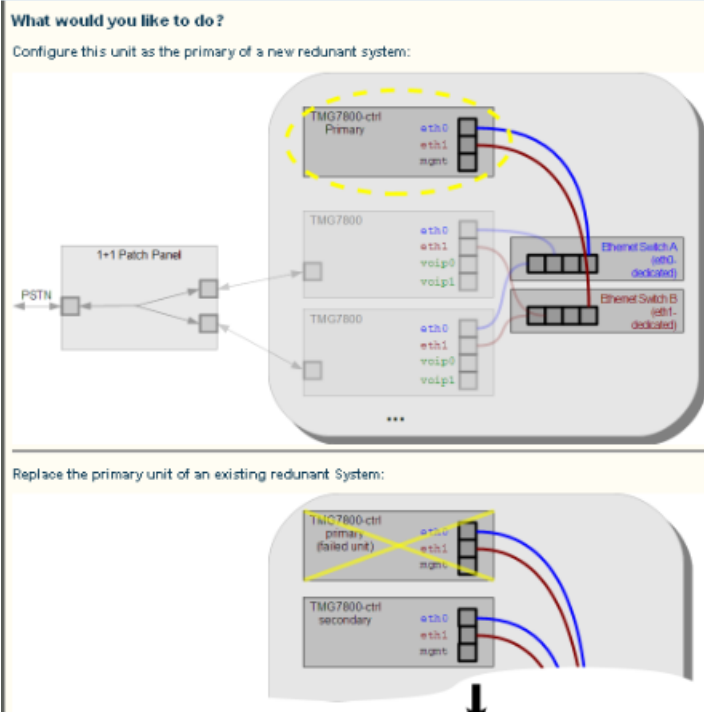


4. Before clicking the **Yes, it's connected like that already**, verify that the physical connections have been properly done.

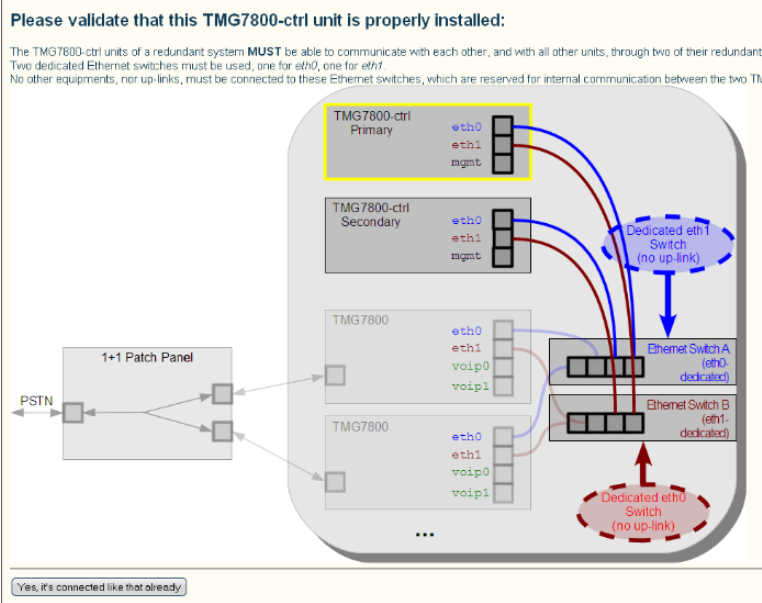


2.6.2 Secondary

1. Connect to the web portal. The Welcome page appears.

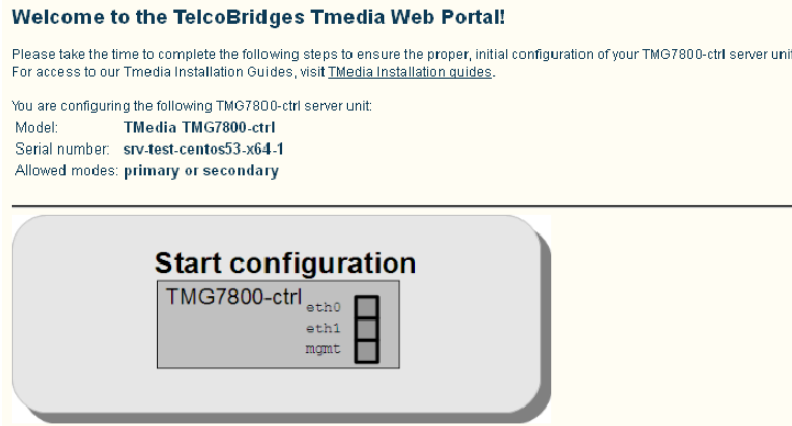


Note: The Welcome page indicates whether the TMP6400-CTRL is a primary or secondary unit.

- 2. Select the bottom portion of the image to configure the TMP6400-CTRL as a secondary unit.

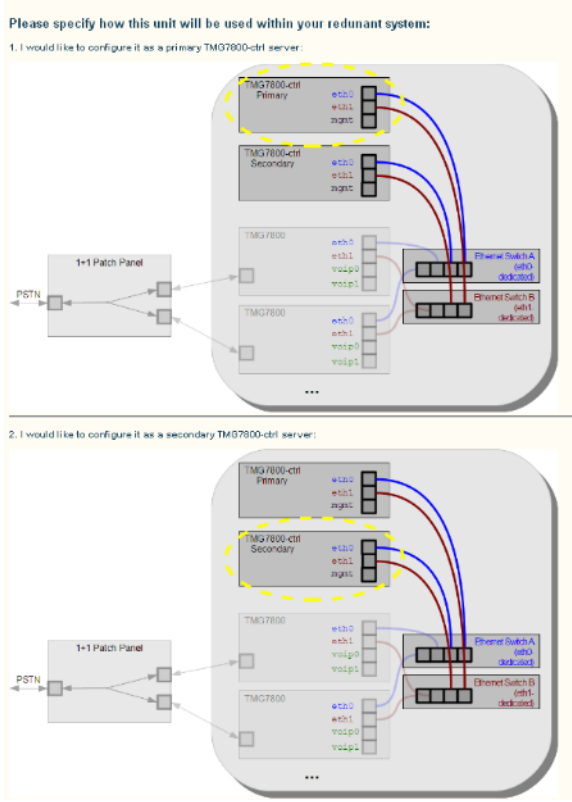

- 3. Before clicking the **Yes, it's connected like that already**, verify that the physical connections have been properly done.

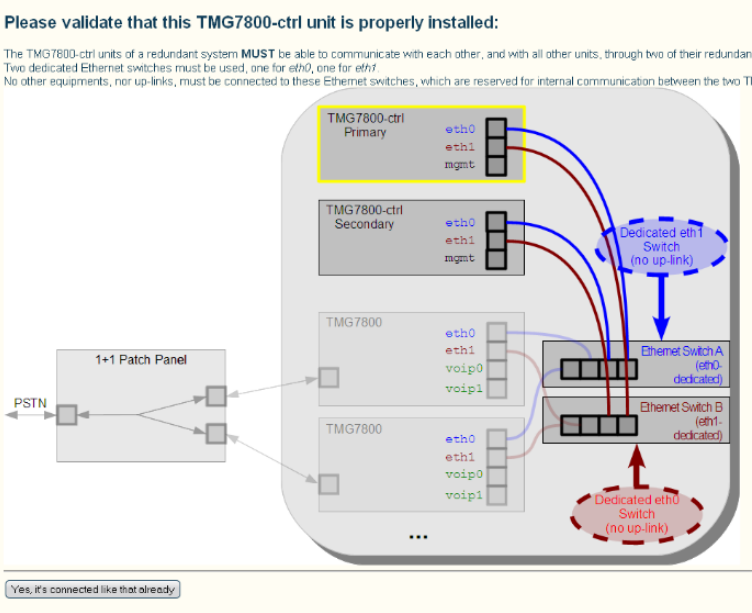

2.7 Verifying the LED Status Indications

When the Tdev Development Platform has been powered up, verify the front panel of each unit to determine that all indications are normal.

2.7.1 TMP6400-CTRL

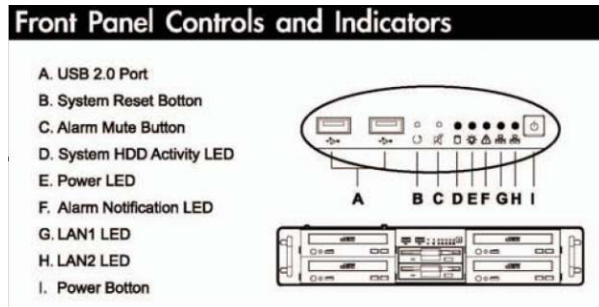


Table 2.3 TMP6400-CTRL Indicators

| Display Order | Display |
|----------------------------------|---|
| System HDD Activity LED (yellow) | Indicates the operation of the hard drive: <ul style="list-style-type: none"> • Blinking = active • No light = inactive |
| Power LED (blue) | <ul style="list-style-type: none"> • On = powered • Off = unpowered |
| Alarm Notification LED (red) | <ul style="list-style-type: none"> • On = stem error • Off = no alarm |
| LAN 1 LED (green) | <ul style="list-style-type: none"> • On = LAN is busy • Off = no connection |
| LAN 2 LED (green) | <ul style="list-style-type: none"> • On = LAN is busy • Off = no connection |

2.7.2 TMP6400 Telecom Unit

Once the TMP6400 Telecom Unit has run successfully through its system boot procedures, the following will be displayed in an alternating fashion as described in table 2.4 on page 48:

Table 2.4 TMP6400 Telecom Unit Displays

| Display Order | Display |
|---------------|---|
| First Screen | IP 0: <ip address of eth0. E.g. 192.168.0.2> IP 1: <ip address of eth1 E.g. 192.168.0.3> |

| Display Order | Display |
|---------------|---|
| Second Screen | <board type. eg. TMP-STM1, TMS-16, TMP-DS3, TMP-16, TMP-32, TMP-64> <adapter name e.g. TB002821> <serial number e.g. TB002821> <release used e.g V2.2.0 RC1> |

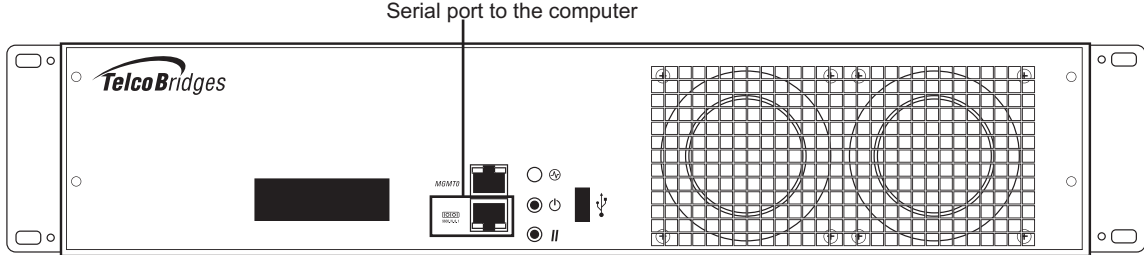


Figure 2.35 Front display and LEDs

If the reset button is pressed a software menu will appear on the display at the front of the unit. Press the function button to select one of the two actions listed in table 2.5 on page 49. Once your selection is made, press the reset button to acknowledge your choice.

Table 2.5 Reset Menu Options

| Menu Choices | Description |
|-----------------|--|
| M Options: | |
| e >Shutdown | Graceful shutdown of the Tdev Development Platform. This takes a few minutes. Press the reset button to restart the Tdev Development Platform. |
| n Rst telecom | Reboots the telecom platform of the Tdev Development Platform. |

2.7.3 TMP6400-TMS

Once the TMP6400-TMS has run successfully through its system boot procedures, the following will be displayed in an alternating fashion as described in table 2.4 on page 48:

Table 2.6 TMP6400-TMS Displays

| Display Order | Display |
|---------------|--|
| First Screen | Toolpack controlled from host <serial number> |
| Second Screen | Serial <Serial number> IP <eth0 ip>/<eth1 ip> |

When pressing the reset button, the following will appear (it is only possible to restart, no shutdown option available):

```
Reset?
>Yes
  No
```

Select with the function button, the press the reset button again to apply the change.

2.8 Powering Down

2.8.1 TMP6400-CTRL

Powering down the Tdev Development Platform requires that the Linux embedded host be shut down. In order to do this, you must connect to the management interface using SSH, and enter:

```
shutdown -hP now
```

Attention DO NOT TURN OFF the power to the Tdev Development Platform system using the power switch located at the rear, unless the Linux host has been properly shut down beforehand, instead use the reset button display, or manually use the shutdown command.

Allow enough time for the Linux host to shut down before turning off the power to the Tdev Development Platform (ex. 1 minute). Be aware that the shutdown procedure of the unit is logged and traceable for support and warranty purposes.

Note As an alternate method to this procedure, refer to Section 2.7 “Verifying the LED Status Indications” on page 48, to power down the Tdev Development Platform with the reset button.

2.8.2 TMP6400 Telecom Unit

Unplug the power cord from the unit. The unit can be restarted using restart button on the front of the unit.

2.8.3 TMP6400-TMS

Unplug the power cord from the unit. The unit can be restarted using restart button on the front of the unit.

Chapter 3 Initial System Configuration

This chapter provides information about the following topics:

- Section 3.1 “Connecting to the Server”
- Section 3.2 “Connecting to the Telecom Unit”

3.1 Connecting to the Server

Note By default, the management port is set to DHCP.

This section and Section 3.1.1 “Configuring the Terminal Emulator Application” provide instructions on how to convert the DHCP management port to a static IP address. If your network supports DHCP, skip these sections.

The serial port interface enables administrators to perform management tasks on the Tdev Development Platform. You can connect to the serial port of a Tdev Development Platform, using one of the following two methods.

Method 1: Use a male-male DB9 cross-connect cable

1. Connect a male-male DB9 cross-connect cable between the DB9 serial port of your computer and the DB9 serial port of the TMP6400-CTRL. See Figure 3.1 on page 53.

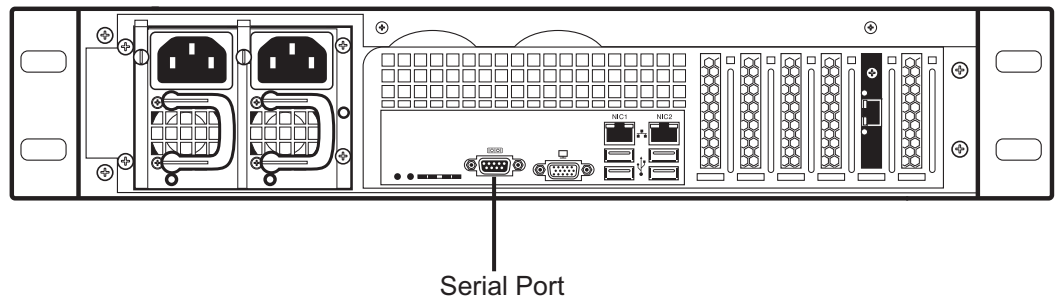


Figure 3.1 Tdev Development Platform Serial Port Connection

Method 2: Use a USB to DB9 adapter

1. Connect the USB connector of the cable to a USB port on your computer and the DB9 connector of the cable to the DB9 serial port of the TMP6400-CTRL. See figure 3.2 on page 54.



Figure 3.2 USB to DB9 Adapter

3.1.1 Configuring the Terminal Emulator Application

Before initiating communication with the Tmedia serial interface, you must first configure a terminal emulator or console application to communicate with the Tdev Development Platform in order to configure initial settings. Available terminal emulation software includes:

- HyperTerminal
- Putty
- Minicom

To configure the terminal emulator application:

1. Set the baud rate (bits per second) to **9600**
2. Set the data rate to **8 bits**
3. Set the parity to **None**
4. Set the stop bits to **1**
5. Set the flow control to **None**

Note See Section 3.1.4 on page 56 to learn how to change the IP address of the MGMT0 port.

3.1.2 Connecting to the Tdev Development Platform

The Tdev Development Platform is shipped with the TMG-CTRL preinstalled. In order to make changes to the system configuration, you must connect the port labelled MGMT0 at the front of the Tdev Development Platform to a terminal.

To access the Tdev Development Platform, you must use an SSH connection. The password is set at the factory and is indicated on the shipment sheet.

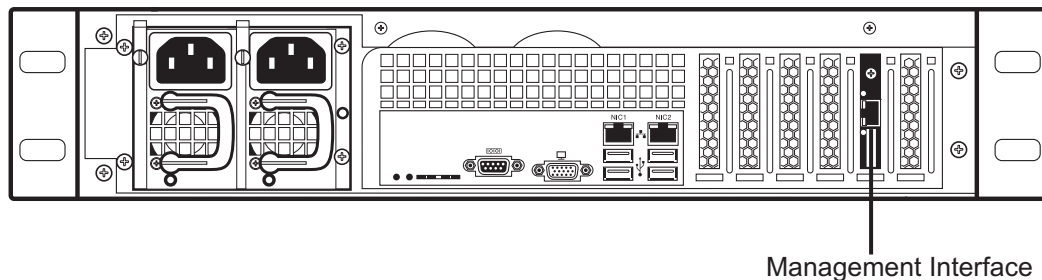


Figure 3.3 Tmedia Management Interface

3.1.3 Retrieving Tdev Development Platform Information

Note The Tdev Development Platform enables you to retrieve system information with the following shell commands:

- `tbproduct` (retrieve the Tmedia product type)
 - `tbserial` (retrieve the Tmedia product type)
-

The Tdev Development Platform enables you to retrieve system information with the following shell commands:

- `tbproduct` (retrieve the Tmedia product type). See http://docs.telcobridges.com/mediawiki/index.php/TMG:Get_Product_Type, for further information.
- `tbserial` (retrieve the Tmedia serial number). See http://docs.telcobridges.com/mediawiki/index.php/TMG:Get_Serial_Number, for further information.

3.1.4 Changing the Tdev Development Platform Management Port IP Address

The management port of the Tdev Development Platform (labeled MGMT0) is configured using DHCP by default. It can be modified it using the following shell script:

- `tbchangeip`. See http://docs.telcobridges.com/mediawiki/index.php/TMG:Change_Management_IP_Address, for further information.

3.1.5 Changing Tdev Development Platform Management Port Passwords

Once logged you are logged on to the Tdev Development Platform, type “passwd”, to change the password being used. The following information will be displayed:

```
[root@TB003540 ~]# passwd

Changing password for user root.
New UNIX password:
Retype new UNIX password:
passwd: all authentication tokens updated successfully.
```

3.1.6 Setting the Time Zone

You can change the time zone of the Tdev Development Platform using the `tbtimezone` shell command.

3.2 Connecting to the Telecom Unit

The serial port interface enables administrators to perform management tasks on the TMP6400 Telecom Unit.

To connect to the serial port of a TMP6400 Telecom Unit:

1. Connect a CAT5 RJ-45 (male-male) cable (supplied with unit) between the com port of your computer and the serial port (labelled 10101) of the TMP6400 Telecom Unit as shown in figure 3.4 on page 57. See Section A.2 on page 67 for a RJ-45 console wiring diagram.
2. If your computer's serial port features a DB9 connector, use the DB9 to RJ-45 adapter supplied with your TMP6400 Telecom Unit. If your computer's serial port features a USB connector, you will need to provide a USB to DB9 adaptor. Refer to figure 3.2 on page 54.

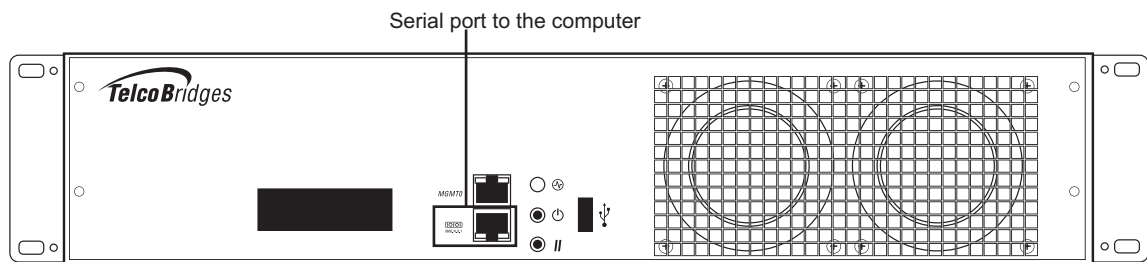


Figure 3.4 Computer to TMP6400 Telecom Unit Serial Port Connection

3.2.1 Configuring the Terminal Emulator Application

Before initiating communication with the Tmedia serial interface, you must first configure a terminal emulator or console application to communicate with the Tdev Development Platform in order to configure initial settings. Available terminal emulation software includes:

- HyperTerminal
- Putty
- Minicom

To configure the terminal emulator application:

1. Set the baud rate (bits per second) to **9600**
2. Set the data rate to **8 bits**
3. Set the parity to **None**
4. Set the stop bits to **1**
5. Set the flow control to **None**

3.2.2 Using the set_boot and print_boot Commands

The set_boot command can be used to modify certain settings and the print_boot command can be used to review the changes. Using the set_boot command, the System ID (also known as gateway port) can be configured.


Settings will be applied on the next reboot of the platform.

Alternatively, you can use the default IP address of ETH0 or ETH1 to configure the Tmedia units. The IP addresses are available on the “important notice” sheet shipped with the unit. To do this, connect a device on the same subnet as the default IP addresses and connect using Telnet.

Note System ID is also known as UDP gateway port.

To modify boot settings:

1. Using the Management Interface, type **set_boot** and press the **Enter** key to move to the next prompt.

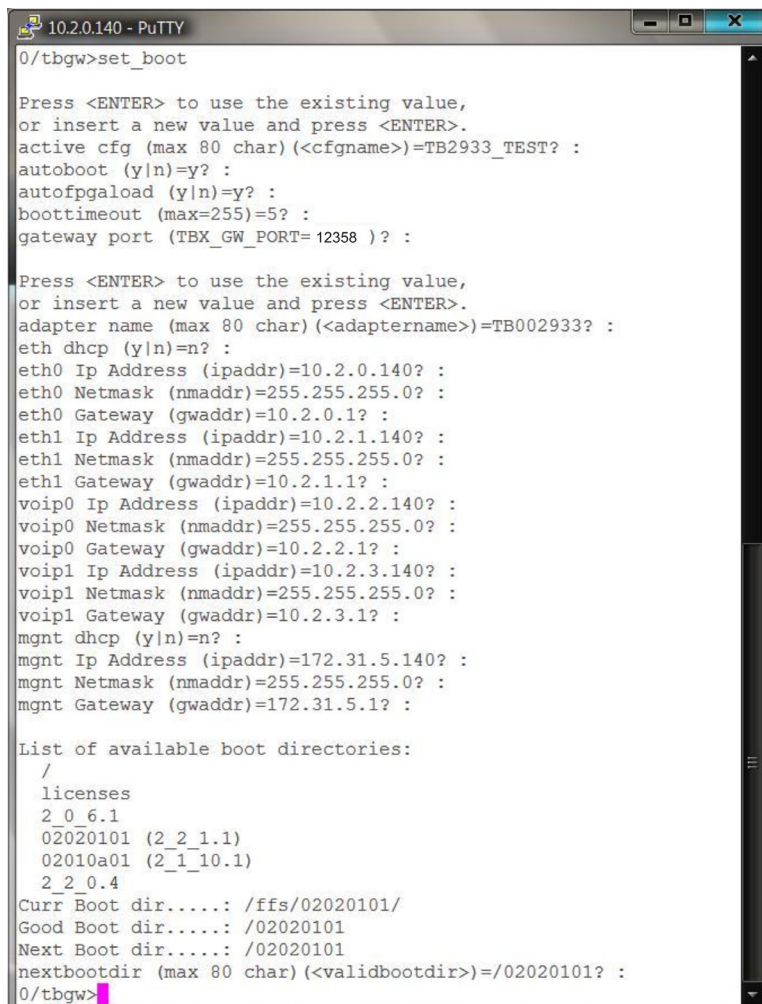

```

10.2.0.140 - PuTTY
0/tbgw>set_boot

Press <ENTER> to use the existing value,
or insert a new value and press <ENTER>.
active cfg (max 80 char) (<cfgname>)=TB2933_TEST? :
autoboot (y|n)=y? :
autofpgalload (y|n)=y? :
boottimeout (max=255)=5? :
gateway port (TBX_GW_PORT= 12358 )? :

Press <ENTER> to use the existing value,
or insert a new value and press <ENTER>.
adapter name (max 80 char) (<adaptername>)=TB002933? :
eth dhcp (y|n)=n? :
eth0 Ip Address (ipaddr)=10.2.0.140? :
eth0 Netmask (nmaddr)=255.255.255.0? :
eth0 Gateway (gwaddr)=10.2.0.1? :
eth1 Ip Address (ipaddr)=10.2.1.140? :
eth1 Netmask (nmaddr)=255.255.255.0? :
eth1 Gateway (gwaddr)=10.2.1.1? :
voip0 Ip Address (ipaddr)=10.2.2.140? :
voip0 Netmask (nmaddr)=255.255.255.0? :
voip0 Gateway (gwaddr)=10.2.2.1? :
voip1 Ip Address (ipaddr)=10.2.3.140? :
voip1 Netmask (nmaddr)=255.255.255.0? :
voip1 Gateway (gwaddr)=10.2.3.1? :
mgnt dhcp (y|n)=n? :
mgnt Ip Address (ipaddr)=172.31.5.140? :
mgnt Netmask (nmaddr)=255.255.255.0? :
mgnt Gateway (gwaddr)=172.31.5.1? :

List of available boot directories:
/
 licenses
 2_0_6.1
 02020101 (2_2_1.1)
 02010a01 (2_1_10.1)
 2_2_0.4
Curr Boot dir.....: /ffs/02020101/
Good Boot dir.....: /02020101
Next Boot dir.....: /02020101
nextbootdir (max 80 char) (<validbootdir>)=/02020101? :
0/tbgw>

```


The following prompts are displayed:

| Prompt | Description |
|---------------------------------------|--|
| Adapter Name | Name of the Tmedia unit. This character string must uniquely identify the Tmedia unit. The default value is the serial number of the Tmedia unit. |
| DHCP | Dynamic IP address is used when the Tmedia unit is started. Currently not supported. |
| eth0/eth1/VoIP0/VoIP1: IP Address | When you are not using DHCP, the IP address is used as the static IP address for ports Ethernet 0 (ETH1), Ethernet 1(ETH2), VoIP0 (VoIP1), VoIP1 (VoIP2), and Management (Ethernet) of the Tmedia unit. |
| eth0/eth1/VoIP0/VoIP1: NetMask | When you are not using DHCP, the network mask is used for ports Ethernet 0, Ethernet 1, and VoIP0 of the Tmedia unit. |
| eth0/eth1/VoIP0/VoIP1: Gateway | When you are not using DHCP, the gateway address is used for ports Ethernet 0, Ethernet 1, and VoIP0 of the Tmedia unit. If you are planning to use the Tmedia unit in the same subnet as the host (i.e. you do not require access to an IP address outside the subnet), then the gateway can be set to '127.0.0.1'. |
| Active cfg | This allows a device to make use of multiple configurations. |
| autoboot: auto fpgaload | When set to "no", the device will stop booting after initial bootup sequence. This is used for debugging only, the default value is "yes". |
| Boot timeout | This is used to set the time lapse between the initial bootup sequence and the complete bootup. The default value for this setting is 5 seconds. |
| gateway port | (see previous page) |
| list of available Boot directories | This enables the user to manually switch between available software versions. |

Note Each network interface (Eth0, ETH1, VoIP0 and VoIP1) must be on a different subnet. For example, if the netmask is 255.255.0.0 and the IP address of ETH0 is 192.168.1.10, the VoIP0 port cannot be on any IP address starting with 192.168.x.x.

Note Do not confuse the gateway port (also known as System ID) with the IP gateway address.

The gateway port is used to control the Tmedia units and TelcoBridges strongly recommends that this setting be left at its default value: 12358.

Tmedia units on the same gateway port will be automatically detected by any Toolpack application.

Different gateway ports can be useful for the segmentation of systems configured to operate on the same physical network and IP subnet. Make certain that all applications in the same system are configured to use the same values.

This is described in the Toolpack Installation guide; for further information, contact TelcoBridges Technical Support.

Note The management interface is reserved for future use.

To view the results of a set_boot command:

1. Type print_boot

```

10.2.0.140 - PuTTY
0/tbgw>print_boot

active config.....: TB2933_TBST
fs location.....: /tb640
autoboot.....: yes
autofpgaload.....: yes
boot timeout.....: 5
gateway port.....: 12401

adapter name.....: TB002933
DHCP.....: no
-----
eth0: ip address.....: 10.2.0.140
eth0: NetMask.....: 255.255.255.0
eth0: Gateway.....: 10.2.0.1
-----
eth1: ip address.....: 10.2.1.140
eth1: NetMask.....: 255.255.255.0
eth1: Gateway.....: 10.2.1.1
-----
voip0: ip address.....: 10.2.2.140
voip0: NetMask.....: 255.255.255.0
voip0: Gateway.....: 10.2.2.1
-----
voip1: ip address.....: 10.2.3.140
voip1: NetMask.....: 255.255.255.0
voip1: Gateway.....: 10.2.3.1
-----
mgmt: ip address.....: 172.31.5.140
mgmt: NetMask.....: 255.255.255.0
mgmt: Gateway.....: 172.31.5.1
-----
Internal: ip address..: 127.255.255.254
-----

List of available boot directories:
/
 licenses
  2_0_6.1
  02020101 (2_2_1.1)
  02010a01 (2_1_10.1)
  2_2_0.4
Curr Boot dir.....: /ffs/02020101/
Good Boot dir.....: /02020101
Next Boot dir.....: /02020101
0/tbgw>
    
```


3.2.3 Creating a Shell Password

Access to the shell commands may be protected with a password.

Note By default, access to the shell commands is not password protected.

To create a password:

1. At the shell prompt, type **set_pass <your password>**.

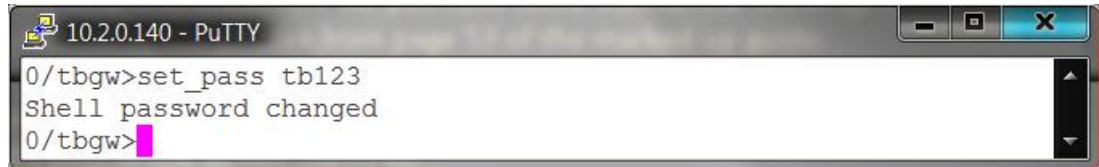

```
10.2.0.140 - PuTTY
0/tbgw>set_pass tb123
Shell password changed
0/tbgw>
```

2. Restart the Tmedia unit. This will reset the Tmedia unit and add the enable and disable shell password commands to the console commands list.


Once the shell password has been set, it cannot be changed unless you are in the **Enabled** mode. The enabled mode provides you with access to operation sensitive commands.

To enter the enabled mode:

1. At the shell prompt, type **enable <your password>**.

To clear the password mode:

1. At the shell prompt, type **set_pass** (without entering a password).

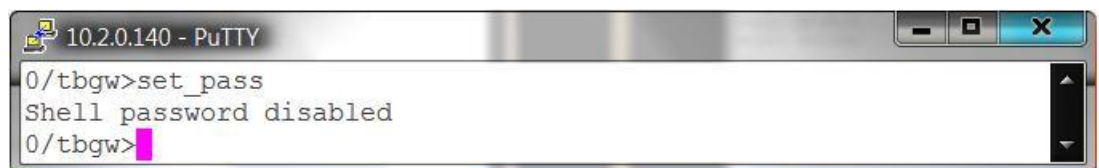

```
10.2.0.140 - PuTTY
0/tbgw>set_pass
Shell password disabled
0/tbgw>
```

To exit the enabled mode:

1. At the shell prompt, type **disable**.

3.2.4 Applying Changes

In order to apply all changes made, enter the following command:

```
reboot
```

This will restart the platform with the new settings taking effect.

Chapter 4 System Backups

This chapter provides information about the following topics:

- Section 4.1 “Creating a Database Backup”
- Section 4.2 “Downloading a Database Backup”
- Section 4.3 “Uploading a Database Backup”
- Section 4.4 “Restoring a Database Backup”

For more detailed information with regard to any of the points described in this section, please refer to the TBWiki: <http://docs.telcobridges.com>

4.1 Creating a Database Backup

It is important that backups be made of system configuration settings in the event of a system failure. It is recommended that a backup be made once the system has been configured. Backups are performed using the web portal.

4.2 Downloading a Database Backup

A backup of system data is stored on the hard drive of the Tdev Development Platform. It is important that system backups be downloaded to an external storage device.

4.3 Uploading a Database Backup

An external backup of your database can be uploaded to your Tdev Development Platform.


4.4 Restoring a Database Backup

In the event of a system failure requiring the replacement of a Tdev Development Platform, a previously saved backup of system settings can be restored to the new unit.


Appendix A Wiring Diagrams

A.1 RJ48C Wiring Diagram: Crossover and Straight Cables

RJ 48 (T1/E1/J1) Wiring Schematic: Crossover Cable

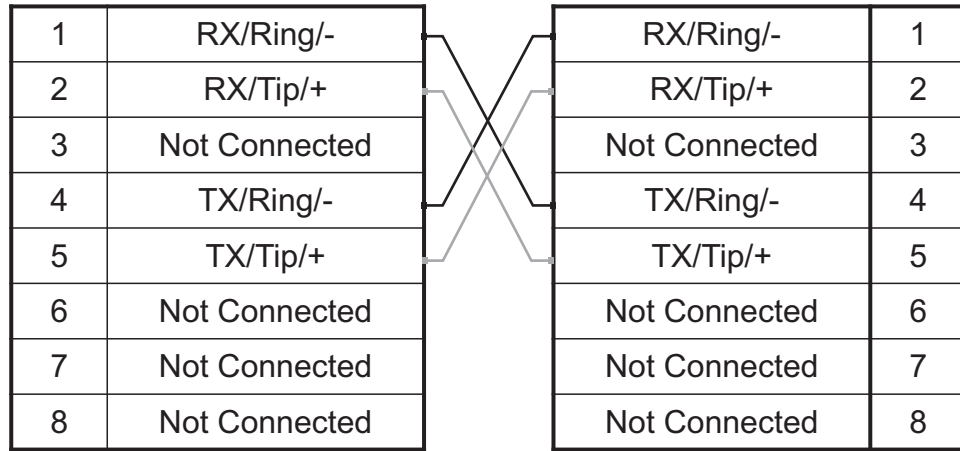

RJ 48 (T1/E1/J1) Wiring Schematic: Straight Cable

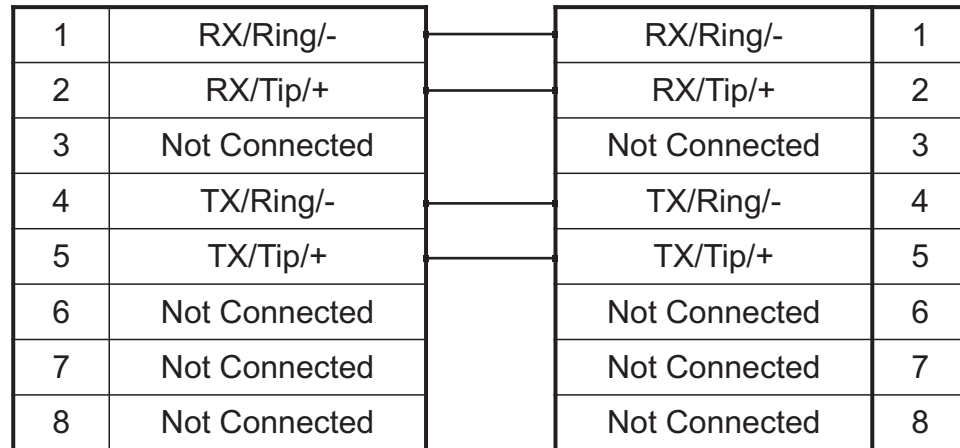

A.2 RJ48 Console Wiring Diagram

