
TMS1600 Quick Installation Guide, 9010-00178-1A, Issue 1.1

5




- · One of two AC power cord
- 19" equipment rack
- CAT7 shielded cables (for interconnecting TMS1600s and TMP6400s)

In the box, you will find:


- One TMS1600
- · One set of mounting brackets with screws
- · One DB-9 to RJ-45 adapter
- SCSI Cables and Patch Panels, if applicable
- Three CAT5 Ethernet Cables (male-male)
- One warranty sheet
- One packing slip
- One TMS1600 Quick Installation Guide




Install rack-mounting hardware on TMS1600 and install on equipment rack

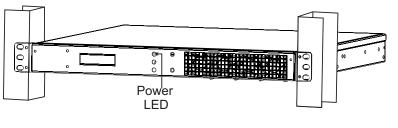


Connect to Tmedia Control Network.



Interconnect TMS1600s with TMP6400s, using CAT7 shielded Ethernet crossover cables:

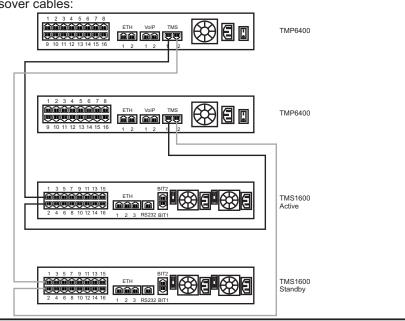

A) Connect to power sources (if only one power source is used, press green button at rear of unit to disable the audible alarm).



B) Turn on power

C) Verify Power LED = Solid Green (Refer to Panel 3)

Next Steps?

9

Refer to the Toolpack documentation set for information on configuring and administering your TMS1600.

Power

Power