

TMS1600 Quick Installation Guide

1 Items not included in this box that you will need:


- One of two AC power cord
- 19" equipment rack
- CAT7 shielded cables (for interconnecting TMS1600s and TMP6400s), P/N TB-CAB-TMS-3

2 In the box, you will find:


- One TMS1600
- One set of mounting brackets with screws
- One DB-9 to RJ-45 adapter
- SCSI Cables and Patch Panels, if applicable
- Three CAT5 Ethernet Cables (male-male)
- One warranty sheet
- One packing slip
- One TMS1600 Quick Installation Guide




3 Install rack-mounting hardware on TMS1600 and install on equipment rack

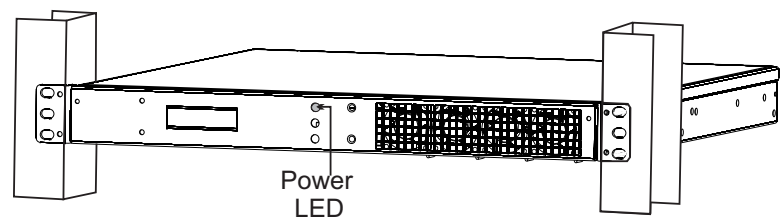

4 Connect to Tmedia Control Network.

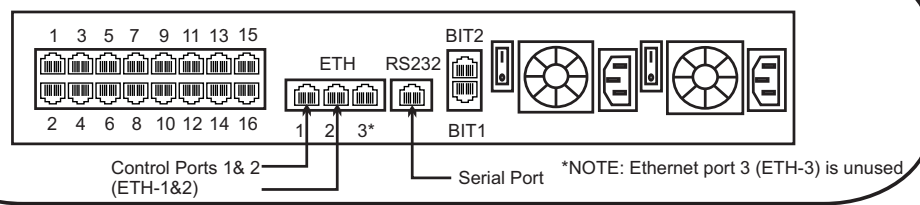


5 Interconnect TMS1600s with TMP6400s, using CAT7 shielded Ethernet crossover cables:

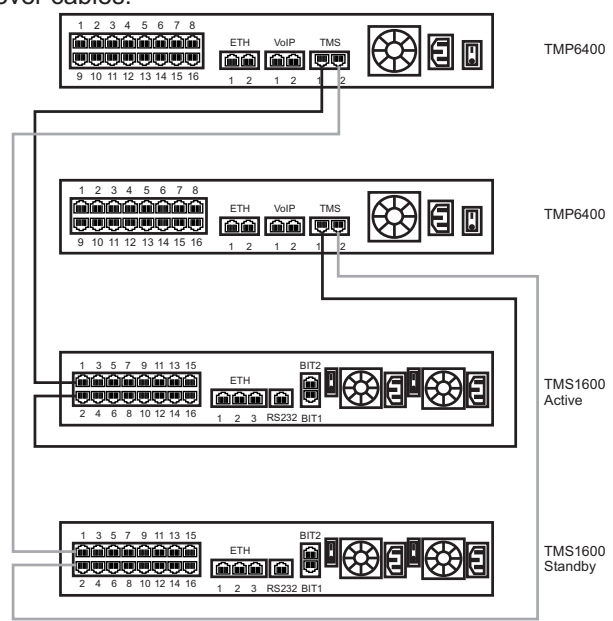

6 A) Connect to power sources B) Turn on power

(if only one power source is used, press green button at rear of unit to disable the audible alarm).

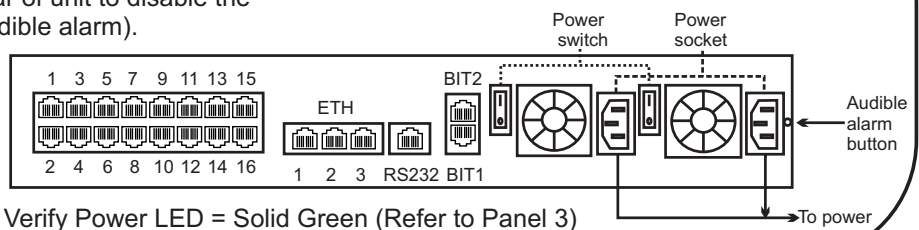

9 Next Steps?

Refer to the Toolpack documentation set for information on configuring and administering your TMS1600.